

# Tuning UEFI Settings for Performance and Energy Efficiency on 5th Gen AMD EPYC Processor-Based ThinkSystem Servers

## Planning / Implementation

The Lenovo ThinkSystem UEFI provides an interface to the server firmware that controls boot and runtime services. The system firmware contains numerous tuning parameters that can be set through the UEFI interface. These tuning parameters can affect all aspects of how the server functions and how well the server performs.

The UEFI in ThinkSystem contains operating modes that pre-define tuning parameters for maximum performance or maximum energy efficiency. This paper describes the tuning parameter settings for the 5th Gen AMD EPYC processor (AMD EPYC 9005 family), codenamed "Turin". We describe each operating mode and other tuning parameters that should be considered for performance and efficiency.

**Note:** The focus of this paper is the parameters and settings applicable to the ThinkSystem SR635 V3, SR645 V3, SR655 V3, and SR665 V3 servers, with 5th Gen EPYC processors, however most (if not all) discussions equally apply to all ThinkSystem V3 servers with these processors.

## Tuning UEFI series

This paper is one in a series on the tuning of UEFI settings on ThinkSystem servers

- Tuning UEFI on servers with AMD processors
  - [2nd, 3rd Gen AMD EPYC processors](#)
  - [4th Gen AMD EPYC processors](#)
  - [5th Gen AMD EPYC processors](#) (this paper)
- Tuning UEFI on servers with Intel processors:
  - [1st, 2nd, 3rd Intel Xeon Scalable processors](#)
  - [4th Gen Intel Xeon Scalable processors](#)

## Summary of operating modes

The ThinkSystem SR635 V3, SR655 V3, SR645 V3 and SR665 V3 servers with 5th Gen AMD EPYC processors offer two preset operating modes, Maximum Efficiency and Maximum Performance. These modes are a collection of predefined low-level UEFI settings that simplify the task of tuning the server for either maximum performance or energy efficiency.

The two pre-defined modes are as follows:

- **Maximum Efficiency** (the default): Maximizes performance/watt efficiency while maintaining reasonable performance
- **Maximum Performance:** Achieves maximum performance at the expense of higher power consumption and lower energy efficiency

The following table summarizes the settings that are made for each mode selected. The values in the **Category** column (column 2) in each table are as follows:

- Recommended: Settings follow Lenovo's best practices and should not be changed without sufficient justification.
- Suggested: Settings follow Lenovo's general recommendation for a majority of workloads but these settings can be changed if justified by workload specific testing.
- Test: The non-default values for the Test settings can optionally be evaluated because they are workload dependent.

Table 1. UEFI Settings for Maximum Efficiency and Maximum Performance

Menu Item	Category	Maximum Efficiency	Maximum Performance
Operating Mode	Recommended	Maximum Efficiency	Maximum Performance
Determinism Slider	Recommended	Performance	Power
Core Performance Boost	Recommended	Enabled	Enabled
cTDP	Recommended	Auto	Maximum cTDP supported by the CPU
Package Power Limit	Recommended	Auto	Maximum cTDP supported by the CPU
Memory Speed	Recommended	Maximum	Maximum
Power Profile Selection	Recommended	Efficiency Mode	High Performance Mode
4-Link xGMI Max Speed 3-Link xGMI Max Speed (Only for 2 socket system)	Recommended	Minimum The value is 20 GT/s	Maximum The value is 32 GT/s
Global C-state Control	Recommended	Enabled	Enabled
DF P-states	Recommended	Auto	Auto
DF C-States	Recommended	Enabled	Enabled
P-State	Recommended	Enabled	Disabled
Memory Power Down Enable	Recommended	Enabled	Enabled
CPU Speculative Store Modes (Hidden setting)	Recommended	Balanced	More Speculative

The following table lists additional UEFI settings that you should consider for tuning for performance or energy efficiency. These settings are not part of the Maximum Efficiency and Maximum Performance modes.

Table 2. Other UEFI settings to consider for performance and efficiency

Menu Item	Category	Comments
Memory Interleave	Suggested	It is recommended to keep Enabled as default.
xGMI Maximum Link Width (Only for 2 socket system)	Suggested	It is recommended to keep Auto as default.
NUMA Nodes per Socket	Suggested	Optionally experiment with NPS2 or NPS4 for NUMA optimized workloads.
SMT Mode	Suggested	It is recommended to keep Enabled as default. Disabled for HPC and low latency/jitter workloads
L1 Stream HW Prefetcher	Suggested	Optionally experiment with Disabled for maximum efficiency
L2 Stream HW Prefetcher	Suggested	Optionally experiment with Disabled for maximum efficiency
L1 Stride Prefetcher	Test	Optionally experiment with Disabled for maximum efficiency
L1 Region Prefetcher	Test	Optionally experiment with Disabled for maximum efficiency
L2 Up/Down Prefetcher	Test	Optionally experiment with Disabled for maximum efficiency
ACPI SRAT L3 Cache as NUMA Domain	Suggested	Optionally experiment with Enabled for NUMA optimized workloads
PCIe Gen Speed Selection	Suggested	Suggest keep Maximum
CPPC	Suggested	Suggest keep Enabled
BoostFmax	Suggested	Suggest keep Auto
DRAM Scrub Time	Suggested	Suggest keep 24 hour interval
Number of Enabled CPU Cores Per Socket	Suggested	It is recommended to keep All as default.
ACPI CST C2 Latency	Test	Larger C2 latency values will reduce the number of C2 transitions and reduce C2 residency.
PCIe Ten Bit Tag Support	Suggested	Suggest keep Enabled as default
Periodic Directory Rinse (PDR) Tuning	Suggested	Suggest keep Blended as default
Probe Filter Organization	Suggested	Suggest keep Shared as default
xGMI Force Link Width (Hidden setting, only for 2 socket system)	Test	Optionally experiment with x8 or x4 for those applications that are not sensitive to socket-to-socket bandwidth and latency.
GMI Folding	Suggested	Suggest disabling it for low memory latency
xGMI P-States	Test	Optionally experiment with P0 for fixed high xGMI link speed

## How to use OneCLI and Redfish

In addition to using UEFI Setup, Lenovo also provides OneCLI/ASU variables and Redfish UEFI Setting Attribute names for managing system settings.

The methods to use OneCLI/ASU variables and Redfish attributes are as follows:

- **OneCLI/ASU variable usage**

Show current setting:

```
Onecli config show "<OneCLI/ASU Var>" --override --log 5 --imm <userid>:<password>@<IP Address>
```

Example:

```
onecli config show "OperatingModes.ChooseOperatingMode" --override --log 5 --imm USERID:PASSWORD@10.240.218.89
```

Set a setting:

```
Onecli config set "<OneCLI/ASU Var>" "<choice>" -override -log 5 -imm <userid>:<password>@<IP Address>
```

Example:

```
onecli config set "OperatingModes.ChooseOperatingMode" "Maximum Efficiency" --override --log 5 --imm USERID:PASSWORD@10.240.218.89
```

- **Redfish Attributes configure URL**

Setting get URL: <https://<BMC IP>/redfish/v1/Systems/Self/Bios>

Setting set URL: <https://<BMC IP>/redfish/v1/Systems/Self/Bios/SD>

Example:

Get URL: <https://10.240.55.226/redfish/v1/Systems/Self/Bios>

Set URL: <https://10.240.55.226/redfish/v1/Systems/Self/Bios/SD>

- **Redfish Value Names of Attributes**

If no special description, choice name is same as possible values. If there is a space character (' '), dash character ('-') or forward slash character ('/') in the possible values, replace them with underline ("\_"). This is because the Redfish standard doesn't support those special characters.

If you use OneCLI to configure the setting, OneCLI will automatically replace those characters with an underline character. However, if you use other Redfish tools, then you may need to replace them manually.

For example, "Operating Mode" has three choices: Maximum Efficiency, Maximum Performance and Custom Mode, their Redfish value names are MaximumEfficiency, MaximumPerformance and CustomMode.

The latest onecli can be obtained from the following link:

<https://support.lenovo.com/us/en/solutions/ht116433-lenovo-xclarity-essentials-onecli-onecli>

For more detailed information on the BIOS schema, please refer to the DMTF website:

[https://redfish.dmtf.org/redfish/schema\\_index](https://redfish.dmtf.org/redfish/schema_index)

Usually, postman can be used for get/set BIOS schema:

<https://www.getpostman.com/>

The remaining sections in this paper provide details about each of these settings. We describe how to access the settings via System Setup (Press F1 during system boot).

## UEFI menu items

The following items are provided to server administrators in UEFI menus that are accessible by pressing F1 when a server is booted, through the XClarity Controller (XCC) service processor, or through command line utilities such as Lenovo's Advanced Settings Utility (ASU) or OneCLI.

These parameters are made available because they are regularly changed from their default values to fine tune server performance for a wide variety of customer use cases.

Menu items described in this paper for ThinkSystem V3 servers with 5th Gen AMD EPYC 9005 series processors are as follows:

## Operating Mode

This setting is used to set multiple processor and memory variables at a macro level.

Choosing one of the predefined Operating Modes is a way to quickly set a multitude of processor, memory, and miscellaneous variables. It is less fine grained than individually tuning parameters but does allow for a simple "one-step" tuning method for two primary scenarios.

**Tip:** Prior to optimizing a workload for maximum performance, it is recommended to set the Operating Mode to "Maximum Performance" and then reboot rather than simply starting from the Maximum Efficiency default mode and then modifying individual UEFI parameters. If you don't do this, some settings may be unavailable for configuration.

This setting is accessed as follows:

- System setup: **System Settings → Operating Modes → Choose Operating Mode**
- OneCLI/ASU variable: `OperatingModes.ChooseOperatingMode`
- Redfish attribute: `OperatingModes_ChoseOperatingMode`

Default Setting: **Maximum Efficiency**

Possible values:

- **Maximum Efficiency**  
Maximizes the performance / watt efficiency with a bias towards power savings.
- **Maximum Performance**  
Maximizes the absolute performance of the system without regard for power savings. Most power savings features are disabled, and additional memory power / performance settings are exposed.
- **Custom Mode**  
Allow user to customize the performance settings. Custom Mode will inherit the UEFI settings from the previous preset operating mode. For example, if the previous operating mode was the Maximum Performance operating mode and then Custom Mode was selected, all the settings from the Maximum Performance operating mode will be inherited.

## Settings for Processors

In this section:

- [Determinism Slider](#)
- [Core Performance Boost](#)
- [cTDP \(Configurable TDP\)](#)
- [PPL \(Package Power Limit\)](#)
- [xGMI settings](#)
- [xGMI Maximum Link Width](#)
- [4-Link xGMI Max Speed or 3-Link xGMI Max Speed](#)
- [Global C-State Control](#)
- [DF \(Data Fabric\) P-states](#)
- [DF \(Data Fabric\) C-States](#)
- [P-State](#)
- [SMT Mode](#)
- [Data Prefetchers](#)
- [ACPI SRAT L3 Cache as NUMA Domain](#)
- [CPPC](#)
- [BoostFmax](#)
- [Number of Enabled CPU Cores Per Socket](#)
- [ACPI CST C2 Latency](#)
- [Periodic Directory Rinse \(PDR\) Tuning](#)
- [Probe Filter Organization](#)
- [xGMI P-States](#)
- [GMI Folding](#)

## Determinism Slider

The determinism slider allows you to select between uniform performance across identically configured systems in your data center (by setting all servers to the Performance setting) or maximum performance of any individual system but with varying performance across the data center (by setting all servers to the Power setting).

5th Gen AMD EPYC processors default to Performance Determinism mode to help ensure consistent performance results across a population of systems. It can help ensure each platform can achieve this consistent level of performance.

When setting Determinism to Performance, ensure that cTDP and PPL are set to the same value (see Configurable TDP control and PPL (Package Power Limit) for more details). The default (Auto) setting for most processors will be Performance Determinism mode.

In the Power Determinism mode, EPYC CPUs can increase boost frequency above the default levels seen with Performance Determinism mode. As a result, in compute heavy workloads some EPYC CPUs may operate at or near the thermal control point the CPU uses. This is standard operation that is not expected to impact reliability and does not impact the warranty of the EPYC CPU.

Also note that the actual performance achieved by the CPU in Power Determinism mode should always be greater or equal to the result achieved in Performance Determinism mode. This is true even if the CPU operates at the thermal control point continuously.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Determinism Slider**
  - **System Settings** → **Processors** → **Determinism Slider**
- OneCLI/ASU variable: `Processors.DeterminismSlider`
- Redfish: `Processors_DeterminismSlider`

Possible values:

- **Power**  
Ensure maximum performance levels for each CPU in a large population of identically configured CPUs by throttling CPUs only when they reach the same cTDP. Forces processors that are capable of running at the rated TDP to consume the TDP power (or higher).
- **Performance** (default)  
Ensure consistent performance levels across a large population of identically configured CPUs by throttling some CPUs to operate at a lower power level.

## Core Performance Boost

Core Performance Boost (CPB) is similar to Intel Turbo Boost Technology. CPB allows the processor to opportunistically increase a set of CPU cores higher than the CPU's rated base clock speed, based on the number of active cores, power and thermal headroom in a system.

Consider using CPB when you have applications that can benefit from clock frequency enhancements. Avoid using this feature with latency-sensitive or clock frequency-sensitive applications, or if power draw is a concern. Some workloads do not need to be able to run at the maximum capable core frequency to achieve acceptable levels of performance.

To obtain better power efficiency, there is the option of setting a maximum core boost frequency. This setting does not allow you to set a fixed frequency. It only limits the maximum boost frequency. If the BoostFmax is set to something higher than the boost algorithms allow, the SoC will not go beyond the allowable frequency that the algorithms support.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Core Performance Boost**
  - **System Settings** → **Processors** → **Core Performance Boost**
- OneCLI/ASU variable: `Processors.CorePerformanceBoost`
- Redfish: `Processors_CorePerformanceBoost`

Possible values:

- **Disabled**  
Disables Core Performance Boost so the processor cannot opportunistically increase a set of CPU cores higher than the CPU's rated base clock speed.
- **Enabled** (default)  
When set to Enable, cores can go to boosted P-states.



## cTDP (Configurable TDP)

Configurable Thermal Design Power (cTDP) allows you to modify the platform CPU cooling limit. A related setting, Package Power Limit (PPL), discussed in the next section, allows the user to modify the CPU Power Dissipation Limit.

Many platforms will configure cTDP to the maximum supported by the installed CPU. Most platforms also configure the PPL to the same value as the cTDP. Please refer to AMD EPYC Processor cTDP Range Table to get maximum cTDP of your installed processor.

If the Determinism slider parameter is set to Performance (see Determinism slider), cTDP and PPL must be set to the same value, otherwise, the user can set PPL to a value lower than cTDP to reduce system operating power. The CPU will control CPU boost to keep socket power dissipation at or below the specified Package Power Limit.

For maximum performance, set cTDP and PPL to the maximum cTDP value supported by the CPU. For increased energy efficiency, set cTDP and PPL to Auto which sets both parameters to the CPU's default TDP value.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **cTDP**
  - **System Settings** → **Processors** → **cTDP**
- OneCLI/ASU variable: `Processors.cTDP`
- Redfish: `Processors_cTDP`

Possible values:

- **Auto** (default)  
Use the platform and the default TDP for the installed processor. cTDP = TDP.
- **Maximum**  
Maximum sets the maximum allowed cTDP value for the installed CPU SKU. Maximum could be greater than default TDP. Refer to [Table 4](#) for maximum cTDP of each CPU SKU.
- **Manual**  
Set customized configurable TDP. Set the configurable TDP (in Watts). If a manual value is entered that is larger than the max value allowed, the value will be internally limited to the maximum allowable value.

## PPL (Package Power Limit)

The parameter sets the CPU package power limit. The maximum value allowed for PPL is the cTDP limit. Set PPL to the cTDP Maximum value when maximum performance is desired. PPL can be set to the cTDP Minimum value or lower but reaching the set value of PPL is not guaranteed when it is set to less than cTDP Minimum.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Package Power Limit**
  - **System Settings** → **Processors** → **Package Power Limit**
- OneCLI/ASU variable: `Processors.PackagePowerLimit`
- Redfish: `Processors_PackagePowerLimit`

Possible values:

- **Auto** (default)  
Set to maximum value allowed by installed CPU
- **Maximum**  
The maximum value allowed for PPL is the cTDP limit.
- **Manual**  
If a manual value entered that is larger than the maximum value allowed (cTDP Maximum), the value will be internally limited to maximum allowable value.

## xGMI settings

xGMI (Global Memory Interface) is the Socket SP5 processor socket-to-socket interconnection topology comprised of four x16 links. Each x16 link is comprised of 16 lanes. Each lane is comprised of two unidirectional differential signals.

Since xGMI is the interconnection between processor sockets, these xGMI settings are not applicable for ThinkSystem SR635 V3, SR655 V3, and SD535 V3 which are one-socket platforms.

NUMA-unaware workloads may need maximum xGMI bandwidth/speed while other compute efficient NUMA-aware platforms may be able to minimize the xGMI speed and achieve adequate performance with power savings from the lower speed. The xGMI speed can be lowered, link width can be reduced from x16 to x8,x4.

The following two settings affect the xGMI links:

- [4-Link xGMI Max Speed or 3-Link xGMI Max Speed](#)
- [xGMI Maximum Link Width](#)

## xGMI Maximum Link Width

Sets the xGMI width of all the links.

This setting is accessed as follows:

- System setup: System Settings → Processors → xGMI Maximum Link Width
- OneCLI/ASU variable: Processors.xGMIMaximumLinkWidth
- Redfish: Processors\_xGMIMaximumLinkWidth

Possible values:

- **Auto** (default)  
Auto sets maximum width based on the system capabilities. For the SR665 V3 and SR645 V3, the maximum link width is set to 16.
- **x4**  
Sets the maximum link width to x4.
- **x8**  
Sets the maximum link width to x8.
- **x16**  
Sets the maximum link width to x16

## 4-Link xGMI Max Speed or 3-Link xGMI Max Speed

The following 2S systems use 4-Link xGMI:

- ThinkSystem SR645 V3
- ThinkSystem SR665 V3
- ThinkSystem SD665 V3
- ThinkSystem SD665-N V3

The SR665 V3 also can optionally be configured as 3-Link xGMI by removing one from the motherboard, which provides 16 more PCIe I/O lanes as shown in the SR665 V3 block diagram in the [ThinkSystem server platform design](#) section.

The following 2S systems use 3-Link xGMI:

- ThinkSystem SR675 V3
- ThinkSystem SR685a V3

The xGMI Max Speed setting is used to set the xGMI speed, thereby maximizing socket-to-socket interconnection performance. For NUMA-aware workloads, users can also lower the xGMI speed setting to reduce power consumption.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **4-Link xGMI Max Speed** (or **3-Link xGMI Max Speed**)
  - **System Settings** → **Processors** → **4-Link xGMI Max Speed** (or **3-Link xGMI Max Speed**)
- OneCLI/ASU variable:
  - `Processors.4-LinkxGMIMaxSpeed`
  - `Processors.3-LinkxGMIMaxSpeed`
- Redfish:
  - `Processors_4_LinkxGMIMaxSpeed`
  - `Processors_3_LinkxGMIMaxSpeed`

Possible values:

- **32Gbps**
- **25Gbps**
- **Minimum** (default, 20 Gbps)

## Global C-State Control

C-states are idle power saving states. This setting enables and disables C-states on the server across all cores. When disabled, the CPU cores can only be in C0 (active) or C1 state. C1 state can never be disabled. A CPU core is considered to be in C1 state if the core is halted by the operating system.

Lenovo generally recommends that Global C-State Control remain enabled, however consider disabling it for low-jitter use cases.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Global C-state Control**
  - **System Settings** → **Processors** → **Global C-state Control**
- OneCLI/ASU variable: `Processors.GlobalC-stateControl`
- Redfish: `Processors_GlobalC_stateControl`

Possible values:

- **Disabled**  
I/O based C-state generation and Data Fabric (DF) C-states are disabled.
- **Enabled** (default)  
I/O based C-state generation and DF C-states are enabled.

## DF (Data Fabric) P-states

Infinity Fabric is a proprietary AMD bus that connects all the Core Cache Dies (CCDs) to the IO die inside the CPU. DF P-states is the Infinity Fabric (Uncore) Power States setting. When Auto is selected the CPU DF P-states will be dynamically adjusted. That is, their frequency will dynamically change based on the workload. Selecting P0, P1, P2 forces the Infinity Fabric to a specific P-state frequency.

DF P-states functions cooperatively with the Algorithm Performance Boost (APB) which allows the Infinity Fabric to select between a full-power and low-power fabric clock and memory clock based on fabric and memory usage. Latency sensitive traffic may be impacted by the transition from low power to full power. Setting APBDIS to 1 (to disable APB) and DF P-states=0 sets the Infinity Fabric and memory controllers into full-power mode. This will eliminate the added latency and jitter caused by the fabric power transitions.

The following examples illustrate how DF P-states and APBDIS function together:

- If DF P-states=Auto then APBDIS=0 will be automatically set. The Infinity Fabric can select between a full-power and low-power fabric clock and memory clock based on fabric and memory usage.
- If DF-P-states=<P0, P1, P2> then APBDIS=1 will be automatically set.
- If DF P-states=P0 which results in APBDIS=1, the Infinity Fabric and memory controllers are set in full-power mode. This results in the highest performing Infinity Fabric P-state with the lowest latency jitter.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **DF P-states**
  - **System Settings** → **Processors** → **DF P-states**
- OneCLI/ASU variable: `Processors.SOCP-states`
- Redfish: `Processors_SOCP_states`

Possible values:

- **Auto** (default)  
When Auto is selected the CPU DF P-states (uncore P-states) will be dynamically adjusted.
- **P0**: Highest-performing Infinity Fabric P-state
- **P1**: Next-highest-performing Infinity Fabric P-state
- **P2**: Minimum Infinity Fabric P-state

## DF (Data Fabric) C-States

Much like CPU cores, the Infinity Fabric can go into lower power states while idle. However, there will be a delay changing back to full-power mode causing some latency jitter. In a low latency workload, or one with bursty I/O, one could disable this feature to achieve more performance with the tradeoff of higher power consumption.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **DF C-States**
  - **System Settings** → **Processors** → **DF C-States**
- OneCLI/ASU variable: `Processors.DFC-States`
- Redfish: `Processors_DFC_States`

Possible values:

- **Enabled** (default)  
Enable Data Fabric C-states. Data Fabric C-states may be entered when all cores are in CC6.
- **Disabled**  
Disable Data Fabric (DF) C-states.

## P-State

This setting enables or disables the CPU's P-State

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **P-State**
  - **System Settings** → **Processors** → **P-State**
- OneCLI/ASU variable: `Processors.P-state`
- Redfish: `Processors_P_state`

Possible values:

- **Enabled** (default)  
Core frequency can move between SKU-specific predefined P-States based on its utilization to balance performance and power usage.
- **Disabled**  
Sets the core frequency to the highest-available frequency within P0.

## SMT Mode

Simultaneous multithreading (SMT) is similar to Intel Hyper-Threading Technology, the capability of a single core to execute multiple threads simultaneously. An OS will register an SMT-thread as a logical CPU and attempt to schedule instruction threads accordingly. All processor cache within a Core Complex (CCX) is shared between the physical core and its corresponding SMT-thread.

In general, enabling SMT benefits the performance of most applications. Certain operating systems and hypervisors, such as VMware ESXi, are able to schedule instructions such that both threads execute on the same core. SMT takes advantage of out-of-order execution, deeper execution pipelines and improved memory bandwidth in today's processors to be an effective way of getting all of the benefits of additional logical CPUs without having to supply the power necessary to drive a physical core.

Start with SMT enabled since SMT generally benefits the performance of most applications, however, consider disabling SMT in the following scenarios:

- Some workloads, including many HPC workloads, observe a performance neutral or even performance negative result when SMT is enabled.
- Using multiple execution threads per core requires resource sharing and is a possible source of inconsistent system response. As a result, disabling SMT could give benefit on some low-jitter use case.
- Some application license fees are based on the number of hardware threads enabled, not just the number of physical cores present. For this reason, disabling SMT on your EPYC 9005 Series processor may be desirable to reduce license fees.
- Some older operating systems that have not enabled support for the x2APIC within the EPYC 9005 Series processor, which is required to support beyond 384 threads. If you are running an operating system that does not support AMD's x2APIC implementation, and have two 96-core processors installed, you will need to disable SMT.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **SMT Mode**
- OneCLI/ASU variable: `Processors.SMTMode`
- Redfish: `Processors_SMTMode`

Possible values:

- **Disabled**  
Disables simultaneous multithreading so that only one thread or CPU instruction stream is run on a physical CPU core
- **Enabled** (default)  
Enables simultaneous multithreading.



## Data Prefetchers

There are five prefetchers described here:

- **L1 Stream Prefetcher:** Uses history of memory access patterns to fetch next line into the L1 cache when cached lines are reused within a certain time period or access sequentially.
- **L1 Stride Prefetcher:** Uses memory access history to fetch additional data lines into L1 cache when each access is a constant distance from previous.
- **L1 Region Prefetcher:** Uses memory access history to fetch additional data line into L1 cache when the data access for a given instruction tends to be followed by a consistent pattern of subsequent access.
- **L2 Stream Prefetcher:** Uses history of memory access patterns to fetch next line into the L2 cache when cached lines are reused within a certain time period or access sequentially.
- **L2 Up/Down Prefetcher:** Uses memory access history to determine whether to fetch the next or previous line for all memory accesses.

These prefetchers use memory access history to determine whether to fetch the next or previous line for all memory access. Most workloads will benefit from these prefetchers gathering data and keeping the core pipeline busy. By default, these prefetchers all are enabled.

Application information access patterns, which tend to be relatively predictable, benefit greatly from prefetching. Most typical line-of-business, virtualization and scientific applications benefit from having prefetcher enabled, however, there are some workloads (for example, the SPECjbb 2015 Java application benchmark) that are very random in nature and will actually obtain better overall performance by disabling some of the prefetchers.

Further, the L1 and L2 stream hardware prefetchers can consume disproportionately more power vs. the gain in performance when enabled. Customers should therefore evaluate the benefit of prefetching vs. the non-linear increase in power if sensitive to energy consumption.

This setting is accessed as follows:

- **System setup:**
  - **System Settings** → **Processors** → **L1 Stream HW Prefetcher**
  - **System Settings** → **Processors** → **L2 Stream HW Prefetcher**
  - **System Settings** → **Processors** → **L1 Stride Prefetcher**
  - **System Settings** → **Processors** → **L1 Region Prefetcher**
  - **System Settings** → **Processors** → **L2 Up/Down Prefetcher**
- **OneCLI/ASU variables:**
  - `Processors.L1StreamHWPrefetcher`
  - `Processors.L2StreamHWPrefetcher`
  - `Processors.L1StridePrefetcher`
  - `Processors.L1RegionPrefetcher`
  - `Processors.L2UpDownPrefetcher`
- **Redfish:**
  - `Processors_L1StreamHWPrefetcher`
  - `Processors_L2StreamHWPrefetcher`
  - `Processors_L1StridePrefetcher`
  - `Processors_L1RegionPrefetcher`
  - `Processors_L2UpDownPrefetcher`

Possible values:

- **Disabled:** Disable corresponding Prefetcher.
- **Enabled** (default): Enable corresponding Prefetcher.

## ACPI SRAT L3 Cache as NUMA Domain

When it is enabled, each Core Complex (CCX) in the system will become a separate NUMA domain. This setting can improve performance for highly NUMA optimized workloads if workloads or components of workloads can be pinned to cores in a CCX and if they can benefit from sharing an L3 cache. When disabled, NUMA domains will be identified according to the NUMA Nodes per Socket parameter setting.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **ACPI SRAT L3 Cache as NUMA Domain**
- OneCLI/ASU variable: `Processors.ACPISRATL3CacheasNUMADomain`
- Redfish: `Processors_ACPISRATL3CacheasNUMADomain`

Possible values:

- **Disabled** (default)  
When disabled, NUMA domains will be identified according to the NUMA Nodes per Socket parameter setting.
- **Enabled**  
When enabled, each Core Complex (CCX) in the system will become a separate NUMA domain.

## CPPC

CPPC (Cooperative Processor Performance Control) was introduced with ACPI 5.0 as a mode to communicate performance between an operating system and the hardware. This mode can be used to allow the OS to control when and how much turbo can be applied in an effort to maintain energy efficiency.

This setting is only configurable when the UEFI setting P-State is enabled. Otherwise, it will be grayed out as disabled.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **CPPC**
- OneCLI/ASU variable: `Processors.CPPC`
- Redfish: `Processors_CPPC`

Possible values:

- **Enabled** (default)
- **Disabled**

## BoostFmax

This value specifies the maximum boost frequency limit to apply to all cores. If the BoostFmax is set to something higher than the boost algorithms allow, the SoC will not go beyond the allowable frequency that the algorithms support.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **BoostFmax**
- OneCLI/ASU variable:
  - `BoostFmax`
  - `Processors.BoostFmaxManual` (for specifying the frequency number)
- Redfish:
  - `Processors_BoostFmax`
  - `Processors_BoostFmaxManual` (for specifying the frequency number)

Possible values:

- **Manual**

A 4 digit number representing the maximum boost frequency in MHz.

If you use OneCLI (or Redfish), first set `Processors.BoostFmax` (or Redfish Attribute `Processors_BoostFmax`) to `Manual`, then specify the maximum boost frequency number in MHz to `Processors.BoostFmaxManual` (or Redfish Attribute `Processors_BoostFmaxManual`).
- **Auto** (default)

Auto set the boost frequency to the fused value for the installed CPU.

## Number of Enabled CPU Cores Per Socket

UEFI allows the administrator to shut down cores in a server. This setting powers off a set number of cores for each processor in a system. As opposed to restricting the number of logical processors an OS will run on, this setting directly affects the number of cores powered on by turning off the core level power gates on each processor.

Manipulating the number of physically powered cores is primarily used in three scenarios:

- Where users have a licensing model that supports a certain number of active cores in a system
- Where users have poorly threaded applications but require the additional LLC available to additional processors, but not the core overhead.
- Where users are looking to limit the number of active cores in an attempt to reclaim power and thermal overhead to increase the probability of Performance Boost being engaged.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **Number of Enabled CPU Cores Per Socket**
- OneCLI/ASU variable: `Processors.NumberofEnabledCPUCoresPerSocket`
- Redfish: `Processors_NumberofEnabledCPUCoresPerSocket`

Possible values:

- **All** (default): Enable all cores
- (Any core count value based on the CCDs and Cores Per CCD in your server)

The following figure shows an example of the selection of possible values:

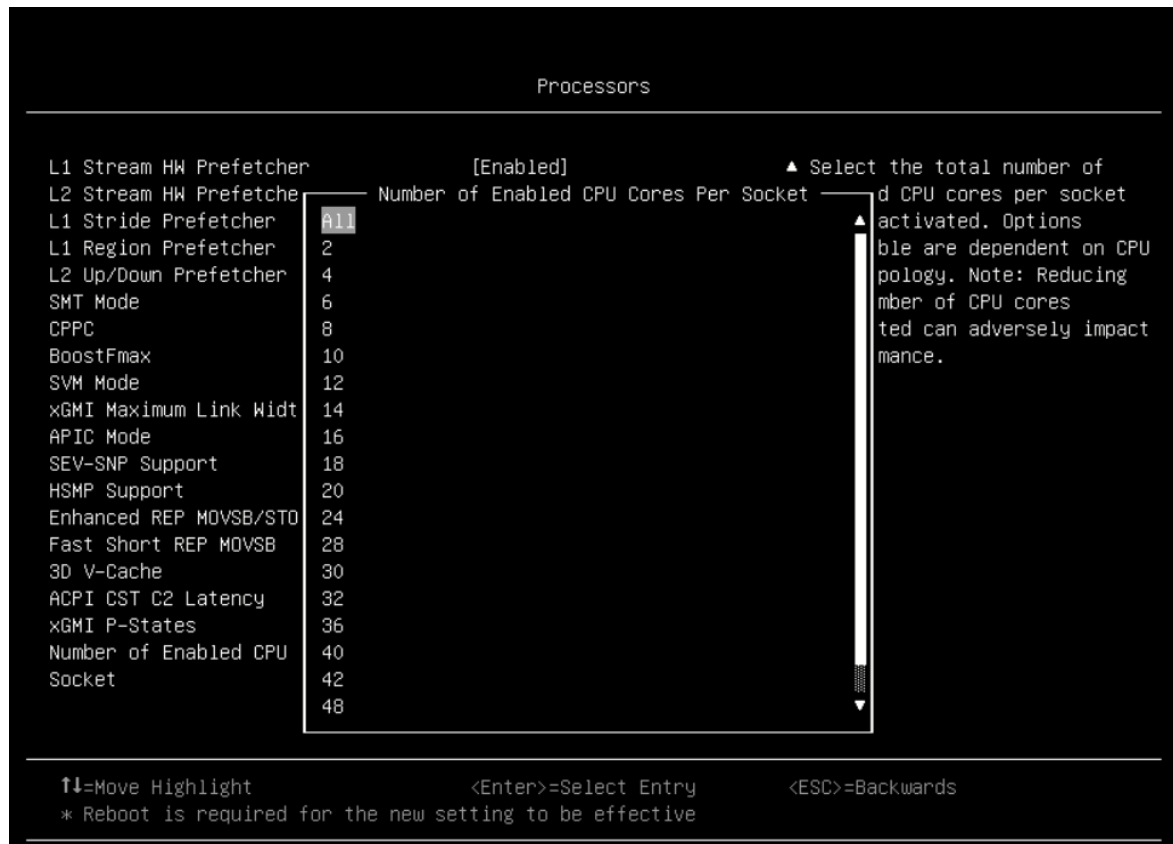


Figure 1. Number of Enabled CPU Cores Per Socket

## ACPI CST C2 Latency

ACPI CST C2 Latency affects how quickly the cores can go to sleep when idle. The faster the cores go to sleep when idle, the more power can be applied to the active cores and the runtime drop. The best value will depend on the OS kernel version, use case and workload.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **ACPI CST C2 Latency**
- OneCLI/ASU variable: `Processors.ACPISTC2Latency`
- Redfish attribute: `Processors_ACPISTC2Latency`

Possible values for ACPI CST C2 Latency:

- **100** (default)
- Enter a value between 18 and 1000 in microseconds as a decimal value

## Periodic Directory Rinse (PDR) Tuning

To ensure long-term performance stability, EPYC Infinity Fabric constantly rinses the coherence directory at a low frequency. All cached data gets invalidated at a corresponding frequency. If invalidated data is still useful, it needs to be re-fetched. This setting can control the frequency of rinse and help manage directory capacity more efficiently for different application scenarios.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **Periodic Directory Rinse (PDR) Tuning**
- OneCLI/ASU variable: `Processors.PeriodicDirectoryRinsePDRTuning`
- Redfish attribute: `Processors_PeriodicDirectoryRinsePDRTuning`

Possible values for Periodic Directory Rinse Tuning:

- **Blended** (default):  
Demand based Directory Rinse, rinse frequency dynamically changes based on workload demand.
- **Periodic**  
Rate based Directory Rinse, rinse frequency is fixed.

## Probe Filter Organization

Probe filter is a hardware mechanism designed to optimize cache coherence in multi-processor systems by reducing unnecessary coherence traffic and improving memory access efficiency. In AMD EPYC architectures, the echo core has its own cache consistency. The probe filter tracks the state and location of the cached memory line, determining whether a memory access requires probing other caches or can be served directly. Before sending coherence probes to other caches, the system consults the probe filter to determine if such probes are necessary. If the probe filter indicates that no other cache holds the line, the probe can be avoided, reducing latency and conserving bandwidth. The organization of the probe filter can be either shared or dedicated, and the difference is how the filter space is allocated and used across cores or CCDs.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **Probe Filter Organization**
- OneCLI/ASU variable: `Processors.ProbeFilterOrganization`
- Redfish attribute: `Processors_ProbeFilterOrganization`

Possible values for Probe Filter Organization:

- **Shared** (default):  
A single probe filter is shared among multiple cores or a whole CCD.
- **Dedicated**  
Each core has its own probe filter space.

## xGMI P-States

xGMI P-States control the data rate and power usage of xGMI links. Auto means the system dynamically adjusts xGMI P-States based on workload demand, thermal conditions, and power saving goals. Select the P0 to target the highest xGMI link performance, resulting in xGMI running at a high speed of 32Gbps. Select the P1 to target lower xGMI link performance and better power efficiency, resulting in 20Gbps xGMI link speed.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **xGMI P-States**
- OneCLI/ASU variable: `Processors.xGMIP-States`
- Redfish attribute: `Processors_xGMIP-States`

Possible values for xGMI P-States:

- **Auto** (default):
- **P0**
- **P1**

## GMI Folding

GMI Folding dynamically adjusts the GMI lane width without having to bring the link fully down and re-train to save power when the GMI link isn't in heavy use. It reduces the number of active communication lanes on the infinity fabric in specific scenarios. Disabling GMI Folding can achieve lower memory latency.

This setting is accessed as follows:

- System setup: **System Settings** → **Processors** → **GMI Folding**
- OneCLI/ASU variable: `Processors.GMIFolding`
- Redfish attribute: `Processors_GMIFolding`

Possible values for GMI Folding:

- **Enabled** (default):
- **Disabled**

## Settings for Memory

In this section:

- [Memory Speed](#)
- [Memory Power Down Enable](#)
- [Memory Interleave](#)
- [NUMA Nodes per Socket](#)
- [DRAM Scrub Time](#)

### Memory Speed

The memory speed setting determines the frequency at which the installed memory will run. Consider changing the memory speed setting if you are attempting to conserve power, since lowering the clock frequency to the installed memory will reduce overall power consumption of the DIMMs.

The memory speed is up to 6400MHz with the 5th Gen AMD EYPC processor. The default speed value "Maximum" is mapped to 6400 MHz when using Lenovo TruDDR5 memory. Please check the Memory option section in the Product Guide for your server for details.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Memory** → **Memory Speed**
  - **System Information** → **System Summary** → **Memory Speed**
- OneCLI/ASU variable: `Memory.MemorySpeed`
- Redfish: `Memory_MemorySpeed`

Possible values:

- **Maximum** (default)  
The actual maximum supported speed and is auto-calculated based on the CPU SKU, DIMM type, number of DIMMs installed per channel, and the capability of the system (up to 6400 MHz, depending on the memory DIMMs installed).
- **6000 MHz**
- **5600 MHz**
- **5200 MHz**
- **Minimum**  
The system operates at the rated speed of the slowest DIMM in the system when populated with different speed DIMMs.

## Memory Power Down Enable

Low-power feature for DIMMs. Lenovo generally recommends that Memory Power Down remain enabled, however consider disabling it for low-latency use cases.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Memory Power Down Enable**
  - **System Settings** → **Memory** → **Memory Power Down Enable**
- OneCLI/ASU variable: `Memory.MemoryPowerDownEnable`
- Redfish: `Memory_MemoryPowerDownEnable`

Possible values:

- **Enabled** (default)  
Enables low-power features for DIMMs.
- **Disabled**

## Memory Interleave

This setting allows interleaved memory accesses across multiple memory channels in each socket, providing higher memory bandwidth. Interleaving generally improves memory performance so the Enabled setting is recommended.

This setting is accessed as follows:

- System setup: **System Settings** → **Memory** → **Interleave**
- OneCLI/ASU variable: `Memory.Interleave`
- Redfish attribute: `Memory_Interleave`

Possible values for Memory Interleave:

- **Enabled** (default)
- **Disabled**



## NUMA Nodes per Socket

This setting lets you specify the number of desired NUMA nodes per socket. NPS0 will attempt to interleave the two sockets together into one NUMA node.

AMD EPYC 9005 processors support a varying number of NUMA Nodes per Socket depending on the internal NUMA topology of the processor. In one-socket servers, the number of NUMA Nodes per socket can be 1, 2 or 4 though not all values are supported by every processor. See [Table 4](#) for the NUMA nodes per socket options available for each processor.

Applications that are highly NUMA optimized can improve performance by setting the number of NUMA Nodes per Socket to a supported value greater than 1.

This setting is accessed as follows:

- System setup: **System Settings** → **Memory** → **NUMA Nodes per Socket**
- OneCLI/ASU variable: `Memory.NUMANodesperSocket`
- Redfish: `Memory_NUMANodesperSocket`

Possible values:

- **NPS0**  
NPS0 will attempt to interleave the 2 CPU sockets together (non-NUMA mode).
- **NPS1** (default)  
One NUMA node per socket.  
Available for any CCD configuration in the SoC.  
Preferred Interleaving: 12-channel interleaving using all channels in the socket.
- **NPS2**  
Two NUMA nodes per socket, one per Left/Right Half of the SoC.  
Requires symmetrical CCD configuration across left/right halves of the SoC.  
Preferred Interleaving: 6-channel interleaving using channels from each half.
- **NPS4**  
Four NUMA nodes per socket, one per Quadrant.  
Requires symmetrical Core Cache Die (CCD) configuration across Quadrants of the SoC.  
Preferred Interleaving: 3-channel interleaving using channels from each quadrant.

## DRAM Scrub Time

Memory reliability parameter that sets the period of time between successive DRAM scrub events. Performance may be reduced with more frequent DRAM scrub events.

This setting is accessed as follows:

- System setup: **System Settings** → **Memory** → **DRAM Scrub Time**
- OneCLI/ASU variable: `Memory.DRAMScrubTime`
- Redfish: `Memory_DRAMScrubTime`

Possible values:

- **Disabled**
- **1 hour**
- **4 hour**
- **8 hour**
- **16 hour**
- **24 hour** (default)
- **48 hour**

## Settings for Power

In this section:

- [Power Profile Selection](#)

### Power Profile Selection

The Power Profile Selection setting determines how the processor balances performance, power efficiency, and thermal limits. It can influence CPU behaviors such as core pstate, core frequency, DF PState, and xGMI width/speed under different workloads.

This setting is accessed as follows:

- System setup:
  - **System Settings** → **Operating Modes** → **Power Profile Selection**
  - **System Settings** → **Power** → **Power Profile Selection**
- OneCLI/ASU variable: Power.PowerProfileSelection
- Redfish: PowerProfileSelection

Possible values:

- **Efficiency Mode** (default)

This mode configures the system for power efficiency at the expense of some performance. It limits the boost frequency available to the cores and restricts the DF P-States available in the system.
- **High Performance Mode**

This mode will choose the default DF P-State algorithm and try to maximize application performance using the application characteristics. This mode favors core performance more than IO die performance. In this mode, all DF P-States are available.
- **Maximum IO Performance Mode**

This mode sets up the Data Fabric to maximize the IO sub-system performance. It favors IO die performance more than core performance. Sometimes, it results in lower core performance to maximize IO throughput.
- **Balanced Memory Performance Mode**

This mode biases the memory subsystem and Infinity Fabric performance toward efficiency by lowering the frequency of the fabric and the width of the xGMI links under light traffic conditions. The core behavior is unaffected. There may be a performance impact under lightly loaded conditions for memory-bound applications compared to the High Performance Mode. The system performs similarly to the High Performance Mode with higher memory and fabric load.
- **Balanced Core Performance Mode**

This mode biases toward consistent core performance across varying core utilization levels by preventing active cores from using the power budget of inactive cores. This mode allows core "boosting" as in the High Performance Mode, but does not allow core boost to take advantage of the power budget of inactive cores, resulting in a more efficient operating point for the active cores. The memory subsystem and Infinity Fabric behavior are unaffected. There may be a performance impact under light core utilization conditions compared to the High Performance Mode. The system performs similarly to the High Performance Mode with high core utilization conditions.
- **Balanced Core Memory Performance Mode**

This mode combines the Balanced Memory Performance Mode and the Balanced Core Performance Mode. It may result in lower performance under light loads compared to the High Performance Mode, but with a significant increase in efficiency under light loads. Performance in this mode will be similar to the High Performance Mode as the system load increases.

## Settings for Devices and I/O Ports

In this section:

- [PCIe Gen Speed Selection](#)
- [PCIe Ten Bit Tag Support](#)

### PCIe Gen Speed Selection

Choose the generation speed for available PCIe slots. Set the PCIe slot as Auto or generation 1, 2, 3, 4 or 5.

This setting is accessed as follows:

- System setup:
  - For slots **System Settings** → **Devices and I/O Ports** → **PCIe Gen Speed Selection** → **Slot N**
  - For NVMe: **System Settings** → **Devices and I/O Ports** → **PCIe Gen Speed Selection** → **NVMe Bay N**
- OneCLI/ASU variable:
  - For slots `DevicesandIOPorts.PCIeGen_SlotN` (N is the slot number, for example `PCIeGen_Slot4`)
  - For NVMe: `DevicesandIOPorts.PCIeGen_ NVMeBayN` (where N is the bay number)
- Redfish:
  - For slots: `DevicesandIOPorts_PCIeGen_SlotN` (N is the slot number)
  - For NVMe: `DevicesandIOPorts_PCIeGen_NVMeBayN` (N is the bay number)

Possible values:

- **Auto** (default): Maximum PCIe speed by installed PCIe device support.
- **Gen1**: 2.5 GT/s
- **Gen2**: 5.0 GT/s
- **Gen3**: 8.0 GT/s
- **Gen4**: 16.0 GT/s
- **Gen5**: 32.0 GT/s

### PCIe Ten Bit Tag Support

This setting enables the PCIe Ten Bit Tag which is optionally supported by PCIe device since Gen4. Enable Ten Bit Tag to increase the number of non-posted request from 256 to 768 for better performance. As latency increases, the increase in unique tags is required to maintain the peak performance at 16GT/s.

This setting is accessed as follows:

- System setup: **System Settings** → **Devices and I/O Ports** → **PCIe Ten Bit Tag Support**
- OneCLI/ASU variable: `DevicesandIOPorts.PCIeTenBitTagSupport`
- Redfish attribute: `DevicesandIOPorts_PCIeTenBitTagSupport`

Possible values for PCIe Ten Bit Tag:

- **Enabled** (default)
- **Disabled**

## Hidden UEFI Items

The UEFI items in this section are more limited in their applicability to customer use cases and are not exposed in UEFI menus. However, they can be accessed using the command line utilities such as Lenovo's Advanced Settings Utility (ASU) or OneCLI.

- [CPU Speculative Store Modes](#)
- [xGMI Force Link Width](#)

### CPU Speculative Store Modes

Speculative execution is an optimization technique in which a processor performs a series of tasks to prepare information for use if required. The store instructions tell the processor to transfer data from a register to a specific memory location. This setting will impact how fast the store instructions send invalidations to the remote cache line.

This setting is accessed as follows:

- OneCLI/ASU variable: `Processors.CPUSpeculativeStoreModes`
- Redfish attribute: `Processors_CPUSpeculativeStoreModes`

Possible values for CPU Speculative Store Mode:

- **Balanced** (default)  
Store instructions may delay sending out their invalidations to remote cacheline copies when the cacheline is present but not in a writable state in the local cache.
- **More Speculative**  
Store instructions will send out invalidations to remote cacheline copies as soon as possible.
- **Less Speculative**  
Store instructions may delay sending out their invalidations to remote cacheline copies when the cacheline is not present in the local cache or not in a writable state in the local cache.

### xGMI Force Link Width

Setting xGMI Force Link Width eliminates any such latency jitter. Applications that are not sensitive to both socket-to-socket bandwidth and latency can use a forced link width of 8 or 4 to save power, which can divert more power to the cores for boost.

If xGMI Force Link Width Control is changed from its default of Auto, the xGMI Max Link Width setting won't work since the xGMI link is constantly forced to the static value.

This setting is accessed as follows:

- OneCLI/ASU variable: `Processors.xGMIForceLinkWidth`
- Redfish attribute: `Processors_xGMIForceLinkWidth`

Possible values for CPU xGMI Force Link Width:

- **Auto(default)**
- **x16**
- **x8**
- **x4**

## Low Latency and Low Jitter UEFI parameter settings

The table in this section shows the recommended settings when tuning for either Low Latency or Low Jitter.

- The Low Latency settings should be used when a workload or application relies on the lowest possible local/remote memory, storage, and/or PCIe adapter latency.
- The Low Jitter settings should be used when minimal run-to-run and system-to-system variation is desired, i.e. more consistent performance.

Note that peak performance may be impacted to achieve lower latency or more consistent performance.

**Tip:** Prior to optimizing a workload for Low Latency or Low Jitter, it is recommended you first set the Operating Mode to “Maximum Performance”, save settings, then reboot rather than simply starting from the Maximum Efficiency default mode and then modifying individual UEFI parameters. If you don’t do this, some settings may be unavailable for configuration.

Table 3. UEFI Settings for Low Latency and Low Jitter

Menu Item	Category	Low Latency	Low Jitter
Determinism Slider	Recommended	Power	Performance
Core Performance Boost	Recommended	Enabled	Disabled
cTDP	Recommended	Maximum	Maximum
Package Power Limit	Recommended	Maximum	Maximum
Memory Speed	Recommended	Maximum	Maximum
Memory Interleave	Recommended	Enabled	Enabled
Power Profile Selection	Recommended	Maximum IO Mode	Balanced Core Memory Performance Mode
4-Link xGMI Max Speed 3-Link xGMI Max Speed	Recommended	32Gbps	32Gbps
xGMI Maximum Link Width	Recommended	Auto	x16
Global C-state Control	Recommended	Enabled	Disabled
DF P-states	Recommended	P0	P0
DF C-States	Recommended	Disabled	Disabled
P-State	Recommended	Disabled	Disabled
Memory Power Down Enable	Recommended	Disabled	Disabled
NUMA Nodes per Socket	Test	NPS=4; Note that available NPS options vary depending on processor SKU and the number of DIMMs installed. Set to the highest available NPS setting.	NPS1 (Optionally experiment with NPS=2 or NPS=4 for NUMA optimized workloads)
SMT Mode	Test	Disabled	Disabled
ACPI SRAT L3 Cache as NUMA Domain	Test	Disabled (Optionally experiment with if application threads can be pinned to a NUMA node and can share an L3 cache)	Disabled (Optionally experiment with if application threads can be pinned to a NUMA node and can share an L3 cache)
GMI Folding	Test	Disabled	Enabled
DRAMScrubTime	Recommended	Disabled	Disabled
CPU Speculative Store Modes	Test	More Speculative	Balanced

## ThinkSystem server platform design

The following figures show the block diagrams of the 5th Gen AMD EPYC processor-based ThinkSystem servers, SR635 V3, SR655 V3, SR645 V3 and SR665 V3 for reference. For other servers, see the respective product guide.

The following figure shows the SR635 V3 system architectural block diagram.

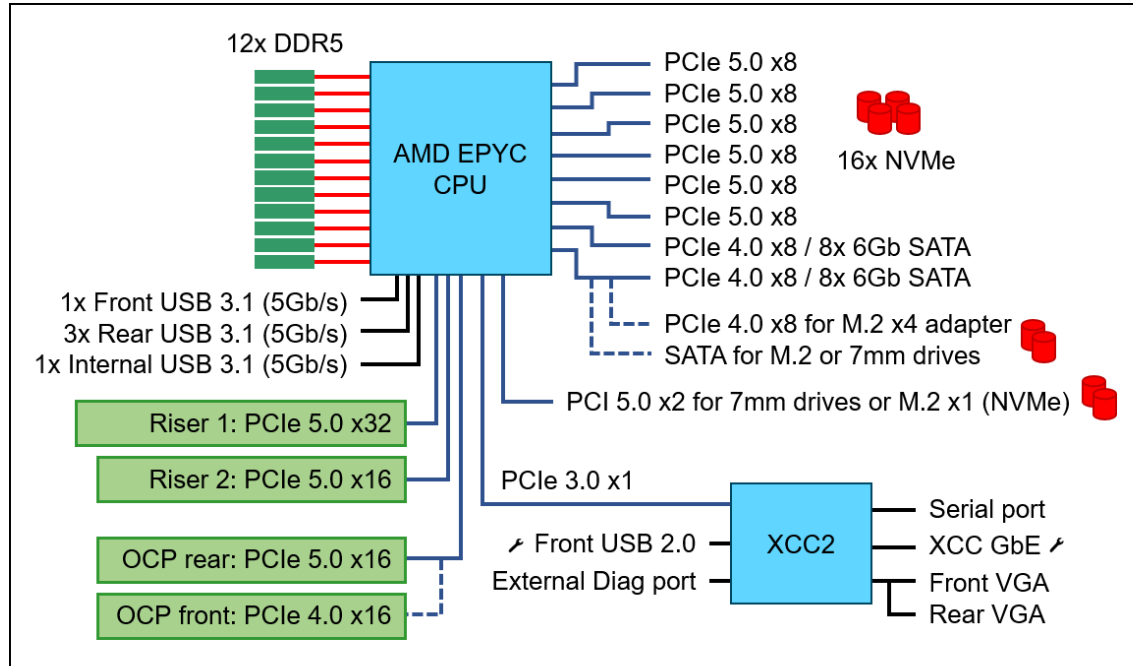


Figure 2. SR635 V3 (1U 1S) system architectural block diagram

The following figure shows the SR655 V3 system architectural block diagram.

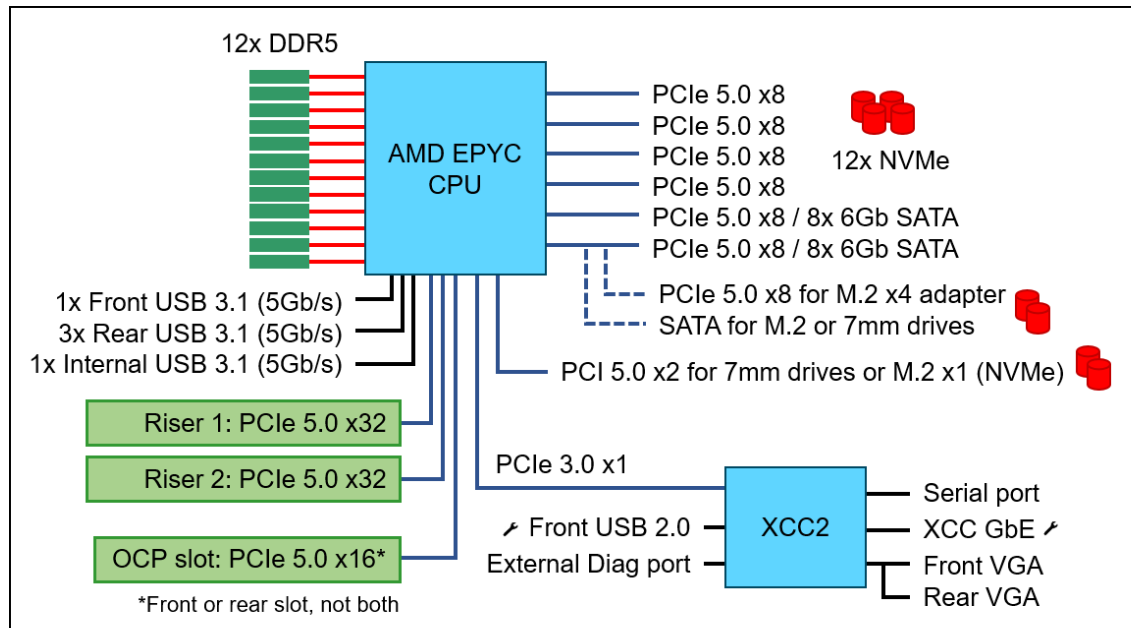


Figure 3. SR655 V3 (2U 1S) system architectural block diagram

The following figure shows the SR645 V3 system architectural block diagram.

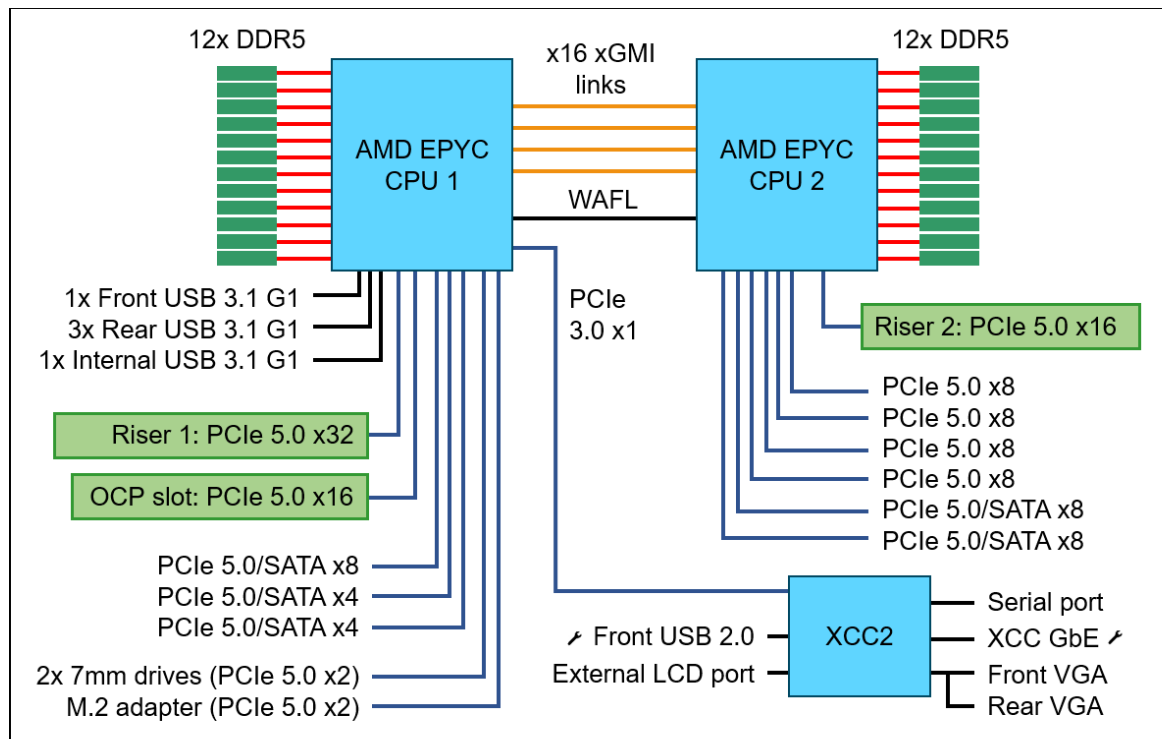


Figure 4. SR645 V3 (1U 2S) system architectural block diagram

The following figure shows the SR666 V3 system architectural block diagram.

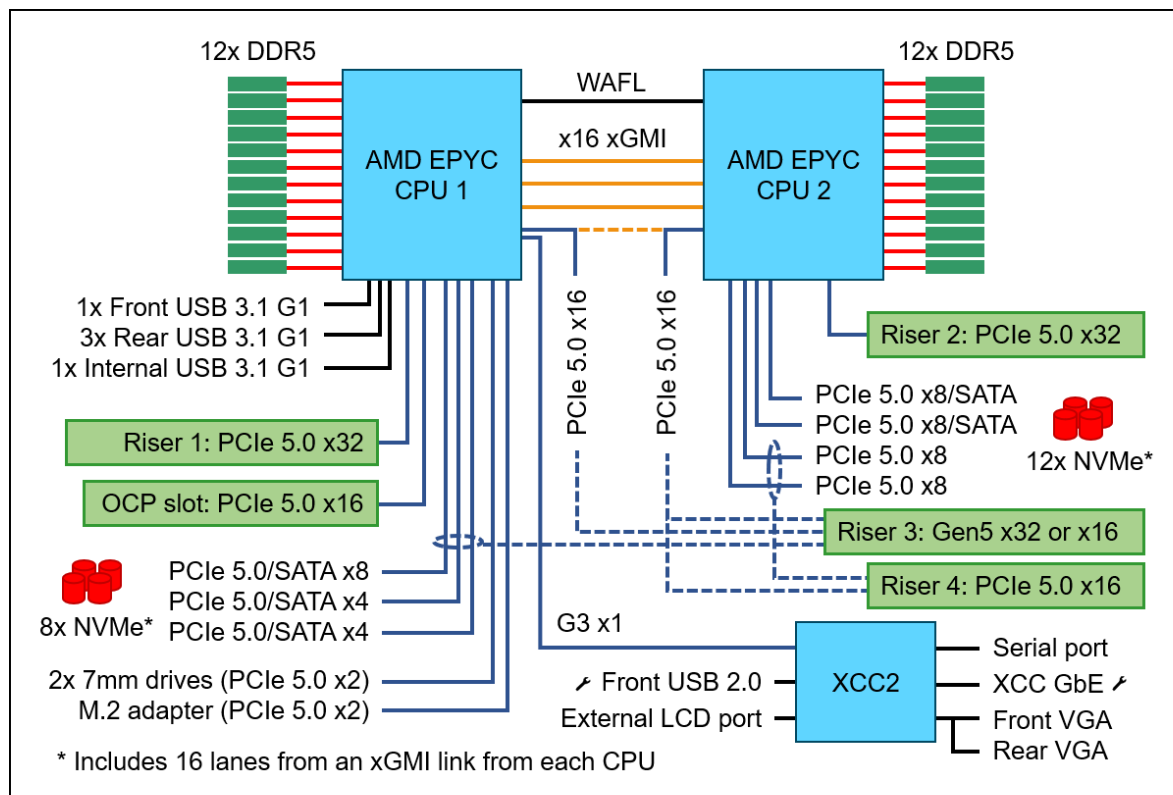


Figure 5. SR665 V3 (2U 2S) system architectural block diagram



The following figure shows the architecture of the AMD EPYC Zen5 Processor. It is up to 16 CCDs per processor, 8 Zen5 cores per CCD, 1MB L2 cache per core, shared 32MB L3 cache per CCD.

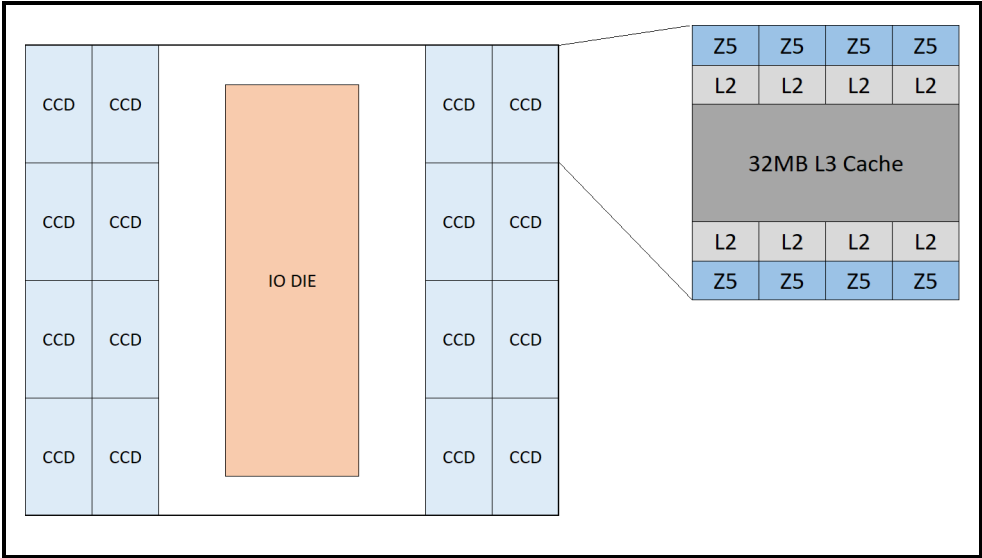


Figure 6. AMD EPYC Zen5 Processor

The following figure shows the architecture of the AMD EPYC Zen5c Processor. It is up to 12 CCDs per processor, 16 Zen5c cores per CCD, 1MB L2 cache per core, shared 32MB L3 cache per CCD.

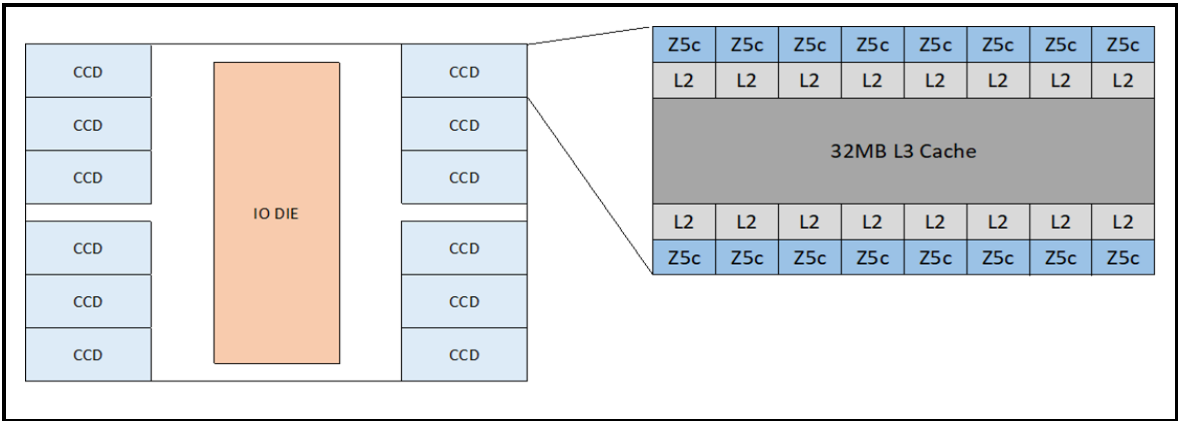


Figure 7. AMD EPYC Zen5c Processor

The following table shows the architectural geometry of the 5th Gen EPYC Processor including the core count, TDP, frequency, L3 cache for each processor. The NUMA Nodes per Socket (NPSx) options for each processor are also listed.

Note: The model number ending in "P" denotes 1P (single-socket only), and "F" denotes high frequency. Not all SKUs are supported, please check the Lenovo Press server product guide for more details.

Table 4. AMD EPYC 9005 Series processor CPU SKU info

Model	Program	Production OPN	Cores	Default TDP(W)	cTDP Min(W)	cTDP Max(W)	Base Freq(GHz)	Boost Freq(GHz)	L3 Cache(MB)	NPS Supported
9965	Zen5c	100-000000976	192	500	450	500	2.25	3.70	384	4,2,1,0
9845	Zen5c	100-000001458	160	390	320	400	2.10	3.70	320	2,1,0

Model	Program	Production OPN	Cores	Default TDP(W)	cTDP Min(W)	cTDP Max(W)	Base Freq(GHz)	Boost Freq(GHz)	L3 Cache(MB)	NPS Supported
9825	Zen5c	100-000000837	144	390	320	390	2.20	3.70	384	4,2,1,0
9755	Zen5	100-000001443	128	500	450	500	2.70	4.10	512	4,2,1,0
9745	Zen5c	100-000001460	128	400	320	400	2.40	3.70	256	4,2,1,0
9655	Zen5	100-000000674	96	400	320	400	2.60	4.50	384	4,2,1,0
9655P	Zen5	100-000001522	96	400	320	400	2.60	4.50	384	4,2,1
9645	Zen5c	100-000001461	96	320	320	400	2.30	3.70	256	4,2,1,0
9565	Zen5	100-000001447	72	400	320	400	3.15	4.30	384	4,2,1,0
9575F	Zen5	100-000001554	64	400	320	400	3.30	5.00	256	4,2,1,0
9555	Zen5	100-000001142	64	360	320	400	3.20	4.40	256	4,2,1,0
9555P	Zen5	100-000001523	64	360	320	400	3.20	4.40	256	4,2,1
9535	Zen5	100-000001147	64	300	240	300	2.40	4.30	256	4,2,1,0
9475F	Zen5	100-000001143	48	400	320	400	3.65	4.80	256	4,2,1,0
9455	Zen5	100-000001542	48	300	240	300	3.15	4.40	256	4,2,1,0
9455P	Zen5	100-000001563	48	300	240	300	3.15	4.40	256	4,2,1
9365	Zen5	100-000001448	36	300	240	300	3.40	4.30	192	2,1,0
9375F	Zen5	100-00000119	32	320	320	400	3.80	4.80	256	4,2,1,0
9355	Zen5	100-000001148	32	280	240	300	3.55	4.40	256	4,2,1,0
9355P	Zen5	100-000001521	32	280	240	300	3.55	4.40	256	4,2,1
9335	Zen5	100-000001149	32	210	200	240	3.00	4.40	128	4,2,1,0
9275F	Zen5	100-000001144	24	320	320	400	4.10	4.80	256	4,2,1,0
9255	Zen5	100-000000694	24	200	200	240	3.20	4.30	128	4,2,1,0
9175F	Zen5	100-000001145	16	320	320	400	4.20	5.00	512	4,2,1,0
9135	Zen5	100-000001150	16	200	200	240	3.65	4.30	64	4,2,1,0
9115	Zen5	100-000001552	16	125	120	155	2.60	4.10	64	2,1,0

Model	Program	Production OPN	Cores	Default TDP(W)	cTDP Min(W)	cTDP Max(W)	Base Freq(GHz)	Boost Freq(GHz)	L3 Cache(MB)	NPS Supported
9015	Zen5	100-000001553	8	125	120	155	3.60	4.10	64	2,1,0

## References

See these links for more information:

- ThinkSystem SR635 V3 product guide  
<https://lenovopress.lenovo.com/lp1609-thinksystem-sr635-v3-server>
- ThinkSystem SR655 V3 product guide  
<https://lenovopress.lenovo.com/lp1610-thinksystem-sr655-v3-server>
- ThinkSystem SR645 V3 product guide  
<https://lenovopress.lenovo.com/lp1607-thinksystem-sr645-v3-server>
- ThinkSystem SR665 V3 product guide  
<https://lenovopress.lenovo.com/lp1608-thinksystem-sr665-v3-server>
- Tuning UEFI Settings for Performance and Energy Efficiency on 4th AMD Processor-Based ThinkSystem Servers  
<https://lenovopress.lenovo.com/lp1977-tuning-uefi-settings-4th-gen-amd-epyc-processor-servers>
- AMD white paper: 5th Gen AMD EPYC Processor Architecture  
<https://www.amd.com/content/dam/amd/en/documents/epyc-business-docs/white-papers/5th-gen-amd-epyc-processor-architecture-white-paper.pdf>
- Lenovo performance paper: Balanced Memory Configurations with 4th Gen AMD EPYC Processors  
<https://lenovopress.lenovo.com/lp1702-balanced-memory-configurations-with-4th-generation-amd-epyc-processors>
- Lenovo performance paper: Configuring AMD xGMI Links on the Lenovo ThinkSystem SR665 V3 Server  
<https://lenovopress.lenovo.com/lp1852-configuring-amd-xgmi-links-on-thinksystem-sr665-v3>
- Lenovo XClarity Essentials OneCLI  
<https://support.lenovo.com/us/en/solutions/ht116433-lenovo-xclarity-essentials-onecli-onecli>
- Lenovo XClarity Controller REST API reference  
<https://pubs.lenovo.com/xcc-restapi/>
- Lenovo Capacity Planner (LCP)  
<https://support.lenovo.com/us/en/solutions/ht504651-lenovo-capacity-planner-lcp>
- WikiChip Chip & Semi - Get detailed information on any CPU family or SKU  
<https://en.wikichip.org/wiki/amd>

## Author

**Peter Xu** is a Systems Performance Verification Engineer in the Lenovo Infrastructure Solutions Group Performance Laboratory in Morrisville, NC, USA. His current role includes CPU, Memory, and PCIe subsystem analysis and performance validation against functional specifications and vendor targets. Peter holds a Bachelor of Electronic and Information Engineering and a Master of Electronic Science and Technology, both from Hangzhou Dianzi University.

## Related product families

Product families related to this document are the following:

- [ThinkSystem SR635 V3 Server](#)
- [ThinkSystem SR645 V3 Server](#)
- [ThinkSystem SR655 V3 Server](#)
- [ThinkSystem SR665 V3 Server](#)

## Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.  
8001 Development Drive  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2025. All rights reserved.

This document, LP2210, was created or updated on April 28, 2025.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at:  
<https://lenovopress.lenovo.com/LP2210>
- Send your comments in an e-mail to:  
[comments@lenovopress.com](mailto:comments@lenovopress.com)

This document is available online at <https://lenovopress.lenovo.com/LP2210>.

## Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at <https://www.lenovo.com/us/en/legal/copytrade/>.

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo®

ThinkSystem®

XClarity®

The following terms are trademarks of other companies:

AMD, AMD EPYC™, and Infinity Fabric™ are trademarks of Advanced Micro Devices, Inc.

Intel® and Xeon® are trademarks of Intel Corporation or its subsidiaries.

SPECjbb® is a trademark of the Standard Performance Evaluation Corporation (SPEC).

Other company, product, or service names may be trademarks or service marks of others.