

## Flex System IB6132D 2-port FDR InfiniBand Adapter Product Guide (withdrawn product)

The Flex System™ IB6132D 2-port FDR InfiniBand Adapter is a two-port mid-mezzanine card for the Flex System x222 Compute Node. It delivers low latency and high bandwidth for performance-driven server clustering applications in enterprise data centers, high-performance computing (HPC), and embedded environments. The adapter is designed to operate at InfiniBand FDR speeds (56 Gbps or 14 Gbps per lane) and provides one 56 Gbps port to each of the independent servers in the x222 Compute Node.

The following figure shows the Flex System IB6132D 2-port FDR InfiniBand Adapter.



Figure 1. Flex System IB6132D 2-port FDR InfiniBand Adapter

### Did you know?

Mellanox InfiniBand adapters deliver industry-leading bandwidth with ultra-low, submicrosecond latency for performance-driven server clustering applications. Combined with the IB6131 InfiniBand Switch, your organization can achieve efficient computing by offloading, from the CPU, protocol processing, and data movement impact, such as Remote Direct Memory Access (RDMA) and Send/Receive semantics, allowing more processor power for the application. Advanced acceleration technology enables more than 90,000,000 Message Passing Interface (MPI) messages per second, making it a highly scalable adapter that delivers cluster efficiency and scalability to tens-of-thousands of nodes.

## Part number information

The following table shows the part number to order this card.

Table 1. Part number and feature code for ordering

Description	Part number	Feature code
Flex System IB6132D 2-port FDR InfiniBand Adapter	90Y3486	A365

The part number includes the following items:

- One Flex System IB6132D 2-port FDR InfiniBand Adapter
- A documentation CD containing the adapter user's guide
- The *Important Notices* document

## Features

The Flex System IB6132D 2-port FDR InfiniBand Adapter has the following features.

### Performance

Based on Mellanox ConnectX-3 technology, the IB6132D 2-port FDR InfiniBand Adapter provides a high level of throughput performance for all network environments by removing I/O bottlenecks in mainstream servers that are limiting application performance. Servers can achieve up to 56 Gbps transmit and receive bandwidth. Hardware-based InfiniBand transport and IP over InfiniBand (IPoIB) stateless offload engines handle the segmentation, reassembly, and checksum calculations that otherwise burden the host processor.

RDMA over the InfiniBand fabric further accelerates application run time while reducing CPU utilization. RDMA allows very high-volume transaction-intensive applications typical of HPC and financial market firms, as well as other industries where speed of data delivery is paramount. With the ConnectX-3-based adapter, highly compute-intensive tasks running on hundreds or thousands of multiprocessor nodes, such as climate research, molecular modeling, and physical simulations, can share data and synchronize faster, resulting in shorter run times. High-frequency transaction applications are able to access trading information more quickly, making sure that the trading servers are able to respond first to any new market data and market inefficiencies, while the higher throughput enables higher volume trading, maximizing liquidity and profitability.

In data mining or web crawl applications, RDMA provides the needed boost in performance to search faster by solving the network latency bottleneck that is associated with I/O cards and the corresponding transport technology in the cloud. Various other applications that benefit from RDMA with ConnectX-3 include Web 2.0 (Content Delivery Network), Business Intelligence, database transactions, and various cloud-computing applications. The low-power consumption of Mellanox ConnectX-3 provides clients with high bandwidth and low latency at the lowest cost of ownership.

### I/O virtualization

Mellanox adapters that use Virtual Intelligent Queuing (Virtual-IQ) technology with SR-IOV provide dedicated adapter resources and ensured isolation and protection for virtual machines (VM) within the server. I/O virtualization on InfiniBand gives data center managers better server utilization and LAN and SAN unification while reducing cost, power, and cable complexity.

## Quality of service

Resource allocation per application or per VM is provided by the advanced quality of service (QoS) that is supported by ConnectX-3. Service levels for multiple traffic types can be assigned on a per flow basis, allowing system administrators to prioritize traffic by application, virtual machine, or protocol. This powerful combination of QoS and prioritization provides the ultimate fine-grained control of traffic, ensuring that applications run smoothly in today's complex environments.

## Specifications

The Flex System IB6132D 2-port FDR InfiniBand Adapter has the following specifications:

- Based on Mellanox Connect-X3 technology.
- Two independent Mellanox ASICs, one port per ASIC.
- Two-port card, with one port routed to each of the independent servers in the x222 Compute Node.
- Each port operates at up to 56 Gbps.
- InfiniBand Architecture Specification V1.2.1 compliant.
- Supported InfiniBand speeds (auto-negotiated):
  - 1X/2X/4X Single Data Rate (SDR) (2.5 Gbps per lane)
  - Double Data Rate (DDR) (5 Gbps per lane)
  - Quad Data Rate (QDR) (10 Gbps per lane)
  - FDR10 (40 Gbps, 10 Gbps per lane)
  - Fourteen Data Rate (FDR) (56 Gbps, 14 Gbps per lane)
- PCI Express 3.0 x8 host-interface operates at up to 8 gigatransfers per second (GTps) bandwidth.
- CPU offload of transport operations.
- CORE-Direct® application offload.
- GPUDirect application offload.
- End-to-end QoS and congestion control.
- Hardware-based I/O virtualization.
- TCP/UDP/IP stateless offload.
- Ethernet encapsulation (EoIB).
- RoHS-6 compliant.

**Note:** To operate at InfiniBand FDR speeds, the Flex System IB6131 InfiniBand Switch requires the FDR Update license, 90Y3462.

## Supported servers

The following table lists the Flex System compute nodes that support the IB6132D 2-port FDR InfiniBand Adapter.

Table 2. Supported servers

Description	Part number	X220 (7906)	X222 (7916)	X240 (8737)	X240 (7162)	X240 M5 (9532)	X440 (7917)	X440 (7167)	X280 / X480 / X880 X6 (7196)
Flex System IB6132D 2-port FDR InfiniBand Adapter	90Y3486	N	Y	N	N	N	N	N	N

For the latest information about the expansion cards that are supported by each blade server type, see ServerProven® at the following web address:

<http://www.lenovo.com/us/en/serverproven/flexsystem.shtml>

Mid-mezzanine cards, such as the IB6132D, are installed in the x222, as shown in the following figure. Only one adapter can be installed, but the adapter can connect to both servers in the x222 Compute Node.



Figure 2. The adapter installed in the Flex System x222 Compute Node

## Supported I/O modules

The IB6132D 2-port FDR InfiniBand Adapter supports the I/O module that is listed in the following table. To operate the IB6131 InfiniBand Switch at FDR speeds (56 Gbps), you must also install the FDR Upgrade license, 90Y3462.

Table 3. I/O modules that are supported by the IB6132D 2-port FDR InfiniBand Adapter

Description	Part number
Flex System IB6131 InfiniBand Switch	90Y3450
Flex System IB6131 InfiniBand Switch (FDR Upgrade)*	90Y3462

\* This license allows the switch to support FDR speeds.

A switch module must be installed in both bays 3 and 4 in the chassis. As shown in the following table, the upper compute node in the x222 routes through the card to the switch in bay 4 and the lower compute node in the x222 routes through the card to the switch in bay 3. The adapter has two ports, and each port is driven by its own ASIC.

Table 4. Adapter to I/O bay correspondence

Compute node	IB6132D 2-port FDR InfiniBand	Corresponding I/O module bay in the chassis
Upper compute node	Upper Port 1	Module bay 4
Lower compute node	Lower Port 1	Module bay 3

The IB6132D 2-port FDR InfiniBand adapter is installed in the single I/O expansion slot in the x222. The following figure shows how the IB6132D 2-port FDR InfiniBand adapter is connected to InfiniBand switches that are installed in the chassis. The figure also shows the four ports of the two Embedded 10 GbE Virtual Fabric Adapters that are routed to the Ethernet switches in bays 1 and 2.

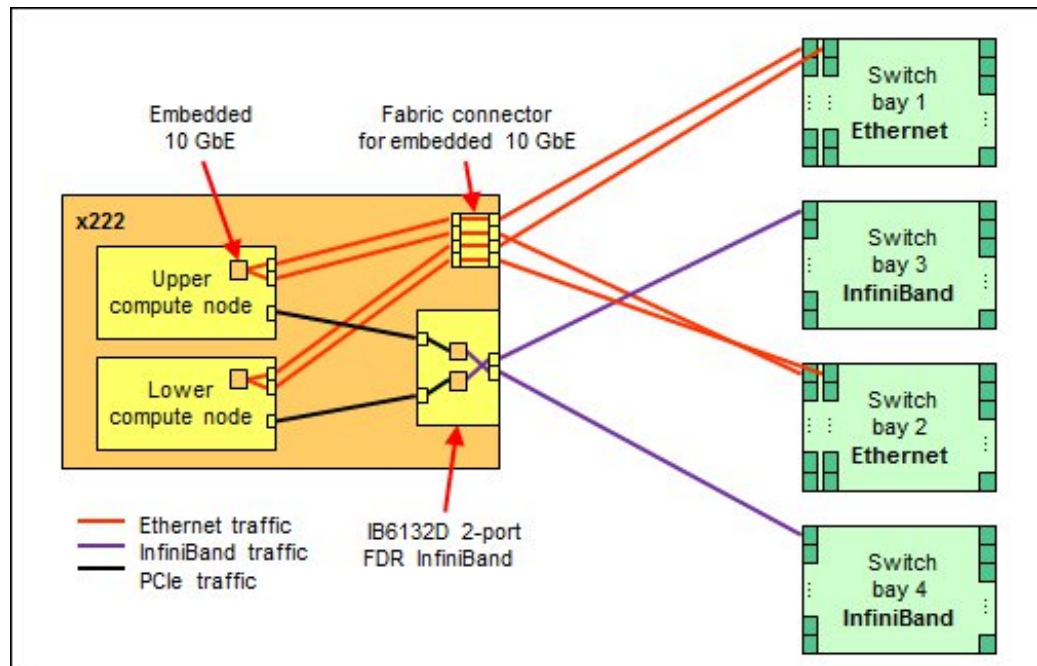


Figure 3. Logical layout of the x222 interconnects - Ethernet and InfiniBand

## Supported operating systems

The IB6132D 2-port FDR InfiniBand Adapter supports the following 64-bit operating systems:

- Microsoft Windows Server 2008 R2
- Microsoft Windows Server 2012 R2
- Red Hat Enterprise Linux 5 Server x64 Edition
- Red Hat Enterprise Linux 6 Server x64 Edition
- SUSE LINUX Enterprise Server 10 for AMD64/EM64T
- SUSE LINUX Enterprise Server 11 for AMD64/EM64T
- VMware ESX 4.1
- VMware vSphere 5.0 (ESXi)

## Regulatory compliance

The adapter conforms to the following standards:

- United States FCC 47 CFR Part 15, Subpart B, ANSI C63.4 (2003), Class A
- United States UL 60950-1, Second Edition
- IEC/EN 60950-1, Second Edition
- FCC - Verified to comply with Part 15 of the FCC Rules, Class A
- Canada ICES-003, issue 4, Class A
- UL/IEC 60950-1
- CSA C22.2 No. 60950-1-03
- Japan VCCI, Class A
- Australia/New Zealand AS/NZS CISPR 22:2006, Class A
- IEC 60950-1(CB Certificate and CB Test Report)
- Taiwan BSMI CNS13438, Class A
- Korea KN22, Class A; KN24
- Russia/GOST ME01, IEC-60950-1, GOST R 51318.22-99, GOST R 51318.24-99, GOST R 51317.3.2-2006, and GOST R 51317.3.3-99
- IEC 60950-1 (CB Certificate and CB Test Report)
- CE Mark (EN55022 Class A, EN60950-1, EN55024, EN61000-3-2, and EN61000-3-3)
- CISPR 22, Class A

## Physical specifications

The dimensions and weight of the adapter are as follows:

- Width: 158 mm (6.2 in.)
- Depth: 108 mm (4.2 in.)
- Weight: 230 g (0.5 lb)

Shipping dimensions and weight (approximate):

- Height: 97 mm (3.8 in.)
- Width: 165 mm (6.5 in.)
- Depth: 215 mm (8.5 in.)
- Weight: 430 g (0.95 lb)

## Popular configurations

The IB6132D 2-port FDR InfiniBand Adapter is used with the IB6131 InfiniBand Switch. The following figure shows one IB6132D adapter that is installed in an x222 Compute Node, which in turn is installed in the chassis. Two IB6131 InfiniBand Switches are installed in I/O bays 3 and 4.

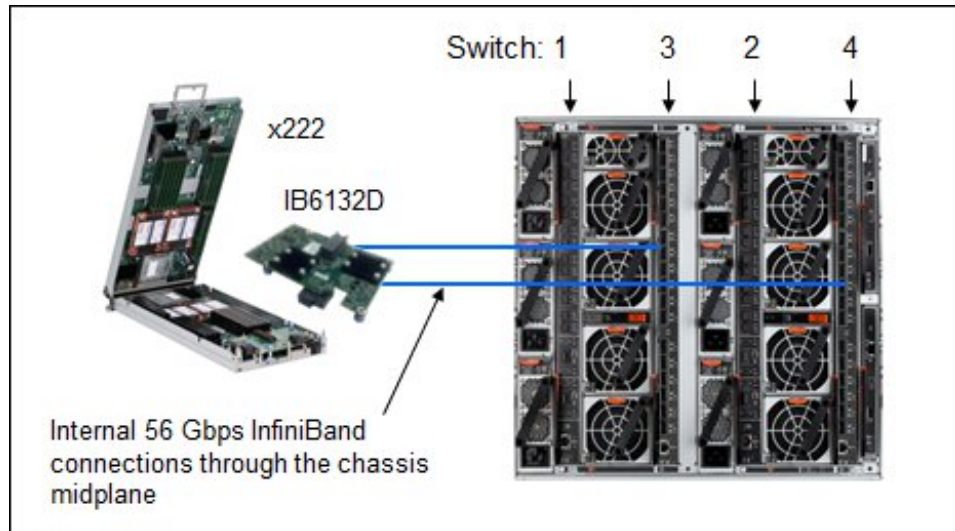


Figure 4. Example configuration

The following table lists the parts that are used in the configuration. This configuration includes the FDR upgrade license for the IB6131 switch, as well as the FDR cables.

Table 5. Components that are used when connecting the IB6132D 2-port FDR InfiniBand Adapter to the IB6131 InfiniBand Switches

Part number/machine type	Description	Quantity
7916	Flex System x222 Compute Node	1 - 14
90Y3486	IB6132D 2-port FDR InfiniBand Adapter	1 per x222 Compute Node
8721-A1x	Flex System Enterprise Chassis	1
90Y3450	Flex System IB6131 InfiniBand Switch (in bays 3 and 4)	2
90Y3462	Flex System IB6131 InfiniBand Switch (FDR Upgrade)	2
90Y3470	3m FDR InfiniBand Cable	Up to 36 (18 per switch)

## Related publications

For more information, see the following resources:

- Product Guides for Flex System servers, switches and options  
<http://lenovopress.com/flexsystem>
- Flex System Information Center (including User's Guides)  
<http://publib.boulder.ibm.com/infocenter/flexsys/information>
- *Flex System Interoperability Guide*  
<http://lenovopress.com/fsig>
- *Flex System Products and Technology by Lenovo*, SG24-8255  
<http://lenovopress.com/sg248255>



## Related product families

Product families related to this document are the following:

- [Blade Network Adapters](#)
- [InfiniBand Embedded Connectivity](#)

## Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.  
8001 Development Drive  
Morrisville, NC 27560  
U.S.A.  
Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2023. All rights reserved.

This document, TIPS1056, was created or updated on September 5, 2015.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at:  
<https://lenovopress.lenovo.com/TIPS1056>
- Send your comments in an e-mail to:  
[comments@lenovopress.com](mailto:comments@lenovopress.com)

This document is available online at <https://lenovopress.lenovo.com/TIPS1056>.

## Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at <https://www.lenovo.com/us/en/legal/copytrade/>.

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo®

Flex System

ServerProven®

The following terms are trademarks of other companies:

Linux® is the trademark of Linus Torvalds in the U.S. and other countries.

Microsoft®, Windows Server®, and Windows® are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.