



Brocade 2-port 10GbE Converged Network Adapter for BladeCenter

Product Guide (withdrawn product)

The Brocade 2-port 10GbE Converged Network Adapter together with the Brocade Converged 10GbE Switch Module is a part of a leading Converged Ethernet solution for BladeCenter that offers native Ethernet and Fibre Channel connectivity, maximum bandwidth and performance, and simplicity in a converged environment.

This card combines the functions of a Host Bus Adapter (HBA) and Network Interface Card (NIC) on one PCIe 2.0 x8 card. It supports full Fibre Channel over Ethernet (FCoE) protocol offload and allows Fibre Channel traffic to converge onto 10 Gbps Converged Enhanced Ethernet (CEE) networks. FCoE and 10 Gbps CEE operations run simultaneously. Figure 1 shows the expansion card.



Figure 1. Brocade 2-port 10GbE Converged Network Adapter

Did you know?

The Brocade CNA and Brocade Converged 10GbE Switch Module for BladeCenter form the industry's first truly converged FCoE BladeCenter solution with native Fibre Channel and Ethernet ports built into one switch module. The FCoE switching provides up-front reduction in SAN/LAN cost and complexity and increases rack utilization. It requires less cabling, cooling, and power, which means up-front reduction in network investment.

Part number information

Table 1. Ordering part number and feature code

Description	Part number	Feature code	
Brocade 2-port 10GbE Converged Network Adapter	81Y1650*	5437	

^{*} Withdrawn from marketing

These part numbers include the following items:

- One Brocade 2-port 10GbE Converged Network Adapter for BladeCenter
- Documentation package

Features

The expansion card has the following features:

- · CFFh form factor
- PCI Express x8 Gen 2 host interface
- Communication module: two 400MHz processors ASIC
- Two ports with XAUI interfaces for PCIe x8 to the high-speed switch module
- Support for up to two Brocade Converged 10GbE Switch Modules in a BC-H or BC-HT chassis
- Support for IPv4 and IPv6
- Support for BladeCenter Open Fabric Manager for BIOS and UEFI
- Brocade Host Connectivity Manager (HCM) device management and Brocade Command Line Utility (BCU) tools
- Unified management with IBM System Storage Data Center Fabric Manager (DCFM) and IBM Systems Director
- CEE support
 - 10 Gbps throughput per port full duplex
 - 1.8 million packets per second per port in each direction (700 byte packets, latency < 2 µs)
 - Checksum/CRC offloads for FCoE packets, IPv4/IPv6 TCP and UDP packets, and IPv4 header
 - VLAN support, VLAN tagging
 - Jumbo frame support (up to 9600 bytes)
 - · Header data split (HDS) feature for advanced link layer
 - Receive side scaling (RSS) feature for advanced link layer
 - TCP segmentation offload (TSO) and large send offload (LSO)
 - Link aggregation (NIC teaming)
 - Priority-based Flow Control (802.1Qbb)
 - Enhanced Transmission Selection (802.1Qaz)
 - Data Center Bridging eXchange Protocol (DCBX)
- FCoE support
 - 10 Gbps throughput per port full duplex
 - Full hardware-based FCoE protocol offload
 - 500,000 IOPS per port for maximum IO transfer rates
 - Target rate limiting
 - N_Port ID Virtualization (NPIV)
 - SAN Boot
 - Fabric-based boot LUN discovery
 - Persistent binding
 - Fibre Channel-Security Protocol (FC-SP)
 - FCoE Initialization Protocol (FIP)

Operating environment

The expansion card has the following physical specifications:

- Dimensions:
 - Approximate height: 13 mm (0.5 in)
 Approximate width: 160 mm (6.3 in)
 Approximate depth: 124 mm (4.9 in)
 Approximate weight: 127 g (0.28 lb)
- · Operating:
 - 0 to 50° C (32 to 122° F) at 0 to 3,048 m (0 to 10,000 ft) operating
- Non-operating:
 - 40 to 73° C (-40 to 163° F) at 0 to 12,193 m (0 to 40,000 ft) storage
- Humidity:
 - 10% to 93% (non-condensing)

Supported servers and I/O modules

The Brocade 2-port 10GbE Converged Network Adapter is supported in the BladeCenter servers that are listed in Table 2.

Table 2. Supported servers




Figure 2 shows where the CFFh card is installed in a BladeCenter server.

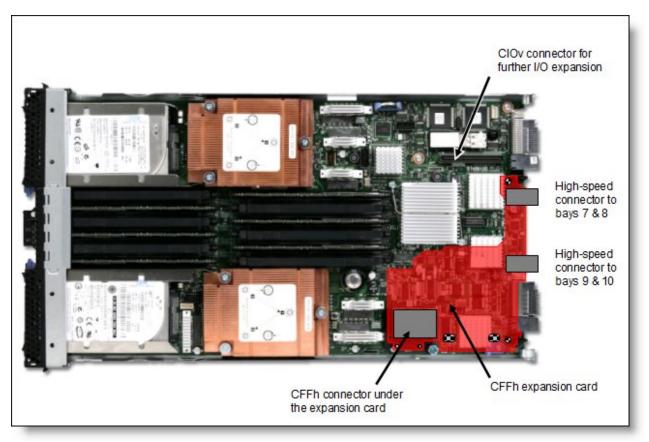


Figure 2. Location on the BladeCenter server planar where the CFFh card is installed

BladeCenter chassis support is based on the blade server type in which the expansion card is installed. Consult ServerProven to see in which chassis each blade server type is supported: http://ibm.com/servers/eserver/serverproven/compat/us/.

Table 3 lists the I/O modules that can be used to connect to the Brocade 2-port 10GbE Converged Network Adapter.

Table 3. I/O modules supported with the Brocade 2-port 10GbE Converged Network Adapter

I/O module	Part number	BladeCenter S	BladeCenter E	BladeCenter H	BladeCenter T	BladeCenter HT	WISW	TH-MISM
Brocade Converged 10GbE Switch Module	69Y1909	Ν	Ν	Υ	N	Υ	Ν	Ν

The I/O module that is listed in Table 3 is supported in BladeCenter H and BladeCenter HT chassis only.

In BladeCenter H, the ports of CFFh cards are routed through the midplane to I/O bays 7, 8, 9, and 10, as shown in Figure 3. The BladeCenter HT is similar in that the CFFh cards are also routed through the midplane to I/O bays 7, 8, 9, and 10.

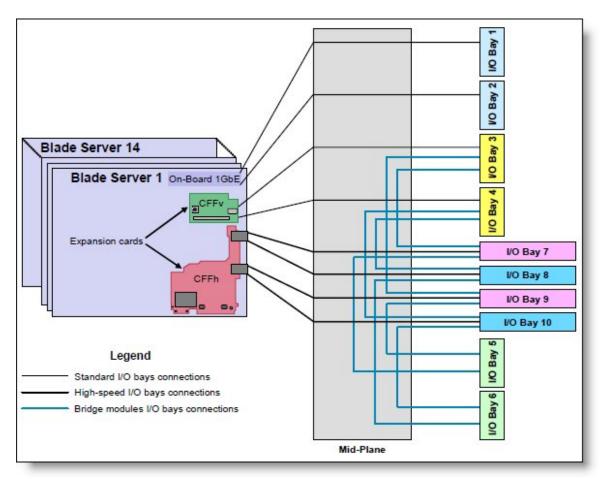


Figure 3. BladeCenter H I/O topology showing the I/O paths from CFFh expansion cards

Two I/O modules must be installed in the chassis for each Ethernet port that you wish to use on the expansion card. Table 4 lists the specific I/O bays in the chassis.

Table 4. Locations of I/O modules required to connect to the expansion card

Expansion card	I/O bay 7	I/O bay 8	I/O bay 9	I/O bay 10
Brocade 2-port 10GbE CNA	Supported	I/O module	Supported	d I/O module

Popular configurations

Figure 4 shows the use of Brocade Converged 10GbE Switch Modules to route two 10 Gb Converged Enhanced Ethernet ports from a Brocade 2-port 10GbE Converged Network Adapter installed into each server. Two Brocade Converged 10GbE Switch Modules are installed in bays 7/8 and bays 9/10 of the BladeCenter H chassis. All connections between the controller, card, and the switch modules are internal to the chassis. No internal cabling is needed.

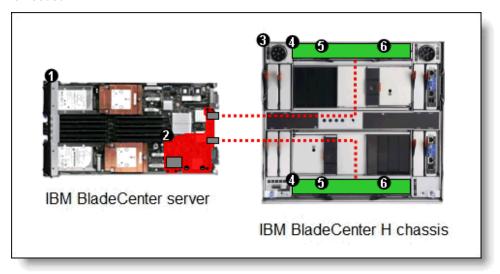


Figure 4. A converged solution using two Brocade Converged 10GbE Switch Modules

The components used in this configuration are listed in Table 5.

Table 5. Components used in Figure 4

Diagram reference	Part number	Description	Quantity
0	Varies	BladeCenter HS22 or other supported server	1-14 or 1-12
0	81Y1650	Brocade 2-port 10GbE Converged Network Adapter	1 per server
3	8852 or 8740/8750	BladeCenter H or BladeCenter HT	1
4	69Y1909	Brocade Converged 10GbE Switch Module	2
6	49Y4216	Brocade 10Gb SFP+ SR Optical Transceiver	Up to 16*
6	44X1962	Brocade 8Gb SFP+ SW Optical Transceiver	Up to 16*

^{*}The Brocade Converged 10GbE Switch Module has 16 external ports - eight 10 Gb CEE ports and eight 8 Gb Fibre Channel ports. You must have one transceiver for each port in an I/O module.

Operating system support

The Brocade 2-port 10GbE Converged Network Adapter for BladeCenter supports the following operating systems:

- Microsoft Windows Server 2008 R2
- Microsoft Windows Server 2003, Web Edition
- Microsoft Windows Server 2003/2003 R2, Datacenter Edition
- Microsoft Windows Server 2003/2003 R2, Datacenter x64 Edition
- Microsoft Windows Server 2003/2003 R2, Enterprise Edition
- Microsoft Windows Server 2003/2003 R2, Enterprise x64 Edition
- Microsoft Windows Server 2003/2003 R2, Standard Edition
- Microsoft Windows Server 2003/2003 R2, Standard x64 Edition
- Microsoft Windows Server 2008, Datacenter x64 Edition
- Microsoft Windows Server 2008, Datacenter x86 Edition
- Microsoft Windows Server 2008, Enterprise x64 Edition
- Microsoft Windows Server 2008, Enterprise x86 Edition
- Microsoft Windows Server 2008, Standard x64 Edition
- Microsoft Windows Server 2008, Standard x86 Edition
- Microsoft Windows Server 2008, Web x64 Edition
- Microsoft Windows Server 2008, Web x86 Edition
- Microsoft Windows Small Business Server 2003/2003 R2 Premium Edition
- Microsoft Windows Small Business Server 2003/2003 R2 Standard Edition
- Microsoft Windows Small Business Server 2008 Premium Edition
- Microsoft Windows Small Business Server 2008 Standard Edition
- Red Hat Enterprise Linux 5 Server Edition
- Red Hat Enterprise Linux 5 Server Edition with Xen
- Red Hat Enterprise Linux 5 Server with Xen x64 Edition
- Red Hat Enterprise Linux 5 Server x64 Edition
- SUSE LINUX Enterprise Server 10 for AMD64/EM64T
- SUSE LINUX Enterprise Server 10 for x86
- SUSE LINUX Enterprise Server 10 with Xen for AMD64/EM64T
- SUSE LINUX Enterprise Server 10 with Xen for x86
- SUSE LINUX Enterprise Server 11 for AMD64/EM64T
- SUSE LINUX Enterprise Server 11 for x86
- SUSE LINUX Enterprise Server 11 with Xen for AMD64/EM64T
- VMware ESX 3.5
- VMware ESX 4.0
- VMware ESX 4.1
- VMware ESXi 4.0
- VMware ESXi 4.1

Support for operating systems is based on the combination of the expansion card and the blade server in which it is installed. See IBM ServerProven for the latest information about the specific versions and service packs supported: http://ibm.com/servers/eserver/serverproven/compat/us/. Select the blade server and then select the expansion card to see the supported operating systems.

Related publications

For more information refer to these documents:

- Lenovo Press product guide for the Brocade Converged 10GbE Switch Module for BladeCenter http://lenovopress.com/tips0789
- Brocade 2-port 10GbE Converged Network Adapter for BladeCenter Installation and User's Guide http://ibm.com/support/entry/portal/docdisplay?Indocid=MIGR-5088151
- BladeCenter Interoperability Guide http://lenovopress.com/bcig
- BladeCenter Products and Technology, SG24-7523 http://lenovopress.com/sg247523

Related product families

Product families related to this document are the following:

• Blade Network Adapters

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc. 8001 Development Drive Morrisville, NC 27560 U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2024. All rights reserved.

This document, TIPS0790, was created or updated on August 7, 2011.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at: https://lenovopress.lenovo.com/TIPS0790
- Send your comments in an e-mail to: comments@lenovopress.com

This document is available online at https://lenovopress.lenovo.com/TIPS0790.

Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at https://www.lenovo.com/us/en/legal/copytrade/.

The following terms are trademarks of Lenovo in the United States, other countries, or both: Lenovo®
BladeCenter Interoperability Guide
BladeCenter Open Fabric
BladeCenter®
ServerProven®

The following terms are trademarks of other companies:

Linux® is the trademark of Linus Torvalds in the U.S. and other countries.

Microsoft®, Windows Server®, and Windows® are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.