



Lenovo XClarity Orchestrator

Product Guide

Lenovo XClarity Orchestrator (LXCO) provides centralized monitoring, management, provisioning, and analytics for environments with large numbers of devices. It leverages existing resource managers (such as [Lenovo XClarity Administrator](#), Lenovo XClarity Management Hub and Schneider Electric EcoStruxure IT Expert) across multiple sites to view overall health, collect device inventory and health summaries, drill down into device details, view event and audit logs, and apply updates to managed resources.

XClarity Orchestrator can support an unlimited number of resource managers that collectively manage a maximum of 10,000 devices.

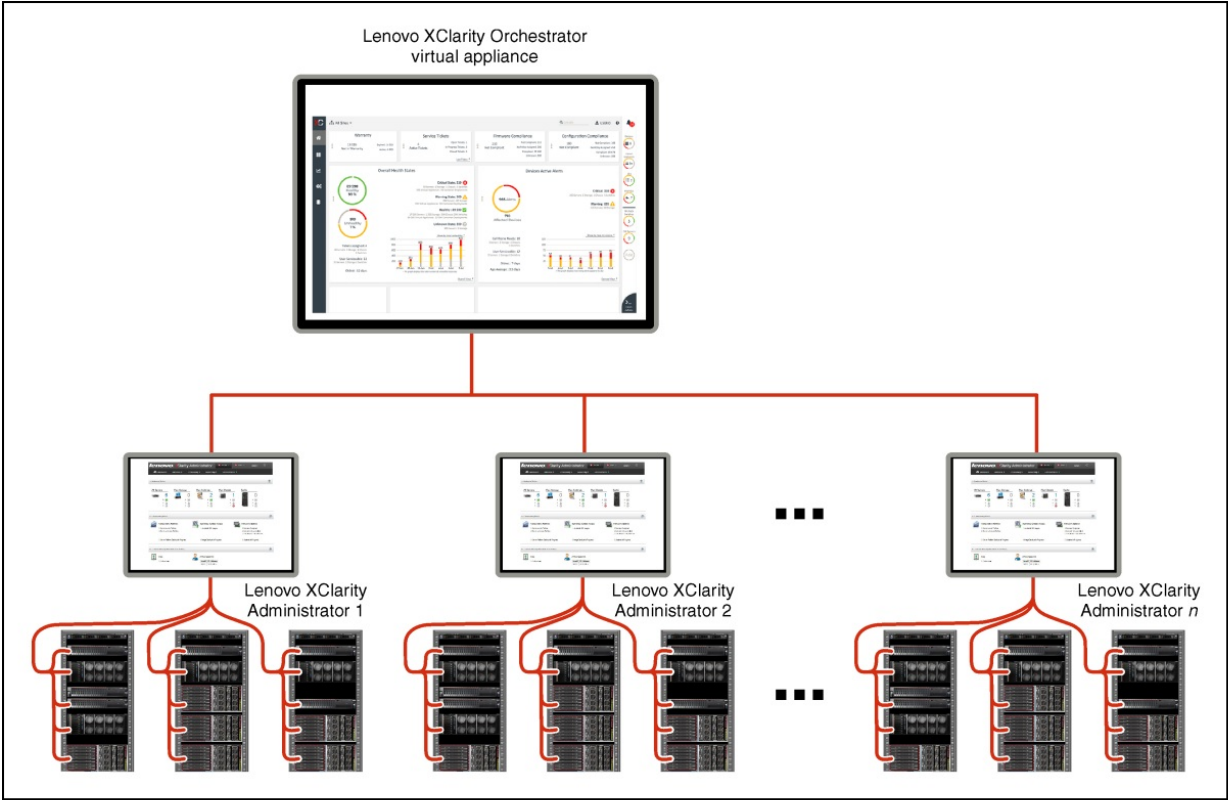


Figure 1. Lenovo XClarity Orchestrator architecture

Did you know?

With the latest support for ThinkEdge Client Devices being managed via the XClarity Management Hub, this enables you to manage Lenovo ThinkSystem, ThinkAgile, ThinkEdge Servers and ThinkEdge client devices all from the one Lenovo XClarity Orchestrator (LXCO) interface for a complete data center-to-edge management solution.

Features

Lenovo XClarity Orchestrator (LXCO) has the following features.

- [Centralized monitoring and management of resources](#)
- [Provisioning updates](#)
- [Provisioning server configuration](#)
- [Provisioning operating systems](#)
- [Service and support](#)
- [Business intelligence machine learning and predictive analytics](#)

Centralized monitoring and management of resources

XClarity Orchestrator provides a single interface to monitor and manage resource managers and the devices that are managed through those resource managers.

LXCO provides:

- Summary views of the health of your managed resources, including resource managers, devices, and infrastructure resources (such as PDUs and UPSs)
- Summary and detailed views of component health, asset inventory, warranty status, and advisories for devices across multiple sites
- Aggregation of critical alerts and events, creating custom alerts, and forwarding events to external applications
- Life-cycle control for managed devices (including power operations)
- Launch in context to the user interface for resource managers and managed devices from the device summary pages

Provisioning updates

You can use XClarity Orchestrator to maintain current software levels on managed resources. You can use the updates catalog to know what software levels are available, use update-compliance policies to identify which resources need to be updated based on custom criteria, and then deploy the desired updates to those resources. LXCO ensures that software is provisioned on the target resources in the correct order.

LXCO supports the following provisioning operations:

- Deploying updates to Lenovo XClarity Administrator resource managers.
- Deploying firmware updates to devices that are managed by XClarity Administrator.

For more information about provisioning updates, see [Provisioning updates to managed resources](#).

Provisioning server configuration

You can quickly provision managed servers using a consistent configuration. Configuration settings (such as baseboard management controller and UEFI settings) are saved as a pattern that can be applied to multiple servers.

XClarity Orchestrator does not directly deploy configuration patterns to managed servers. Instead, it sends a request to the applicable resource manager to start a job to perform the deployment, and then tracks the progress of the request.

For more information about provisioning server configurations, see [Provisioning server configurations](#).

Provisioning operating systems

You can use XClarity Orchestrator to deploy operating-system images to multiple servers. XClarity Orchestrator does not directly deploy operating system to managed servers. Instead, it sends a request to the applicable XClarity Administrator resource manager to start a job to perform the update, and then tracks the progress of the request.

Note: The OS deployment feature requires XClarity Administrator v4.0 or later.

For more information about provisioning server configurations, see [Provisioning operating systems](#).

Service and support

XClarity Orchestrator can be set up to collect and send diagnostic files automatically to Lenovo Support using Call Home when certain serviceable events occur in managed resources. You can also manually collect diagnostic files, open a problem record, and send diagnostic files to the Lenovo Support Center.

For more information about service and support, see [Working with service and support](#).

Business intelligence machine learning and predictive analytics

XClarity Orchestrator can connect to third-party services (such as Splunk) for business intelligence machine learning and predictive analytics to:

- Collect and display trend data (such as processor and memory utilization, power consumption, temperature, unauthorized access, repeated and lost events, and mean time between processes like firmware updates and system reboots)
- Uses metric data to predict failures (such as repeated events and health reports)
- Create custom analytics reports based on existing data, including alerts, events, device inventory, and device metrics.
- Define custom alert rules that, when enabled, raise alerts when specific conditions exist in your environment.

User Interface

The LXCO User Interface is menu driven and provides the following options:

- [Dashboard](#)
- [Resources](#)
- [Monitoring](#)
- [Administration](#)
- [Maintenance](#)

Dashboard

The Dashboard is the hub of Lenovo XClarity Orchestrator that provides access to information that is important to you. It contains report cards that each summarize the status of resources and activities in your environment, including devices health, vulnerabilities, compliance, and alerts.

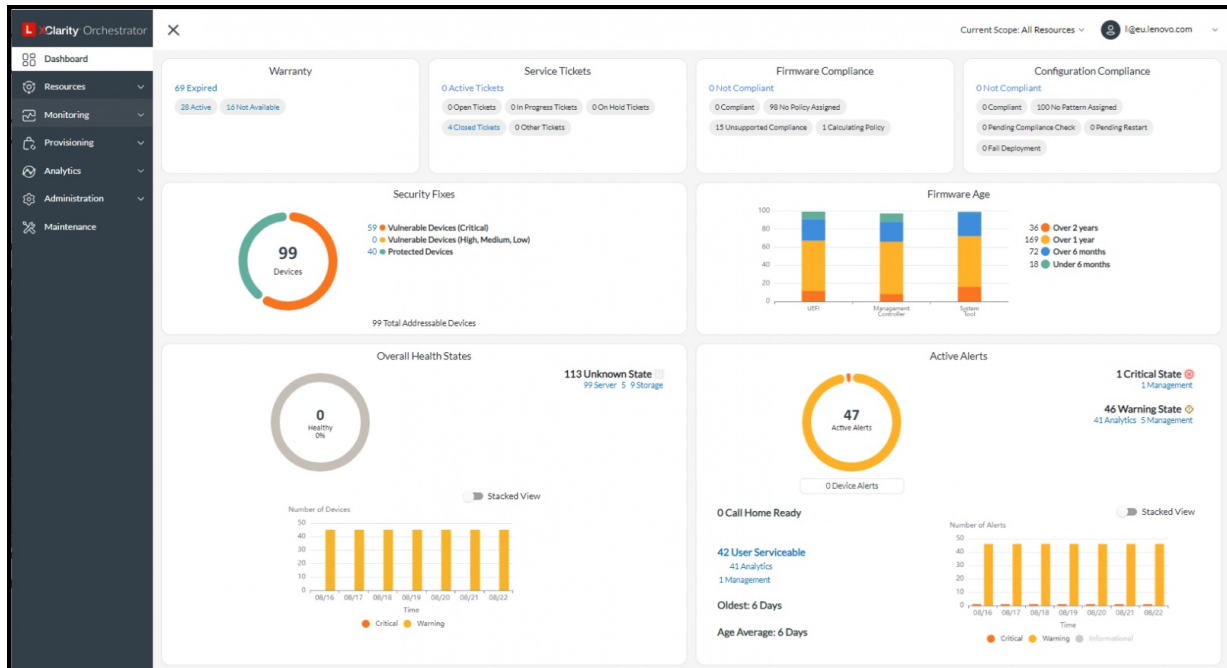


Figure 2. Dashboard

You can also view the following:

- Type, version, status, and connectivity of each resource manager.
- Status of all devices that are managed across all resource managers.
- Detailed information about each device, including the overall summary of device health and status, inventory, alerts and events, usage, and firmware.
- Alerts which can be hardware or management conditions that require investigation and user action. Lenovo XClarity Orchestrator polls the resource managers asynchronously and displays alerts that are received from those managers.
- Historical list of all resource and audit events.
- Events and alerts that are generated by Lenovo XClarity Orchestrator and retrieved from the resource managers.

Resources

From Resources you can navigate to Resource Managers, Servers, Storage, Switches, Chassis Infrastructure and Groups.

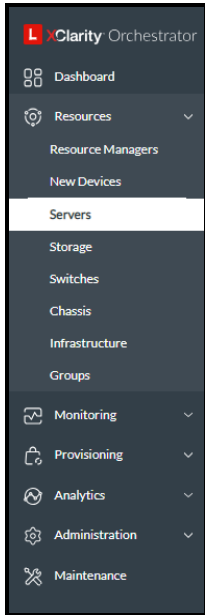


Figure 3. Resources menu

The following view is an example of the Servers view, the other options have very similar looking views.

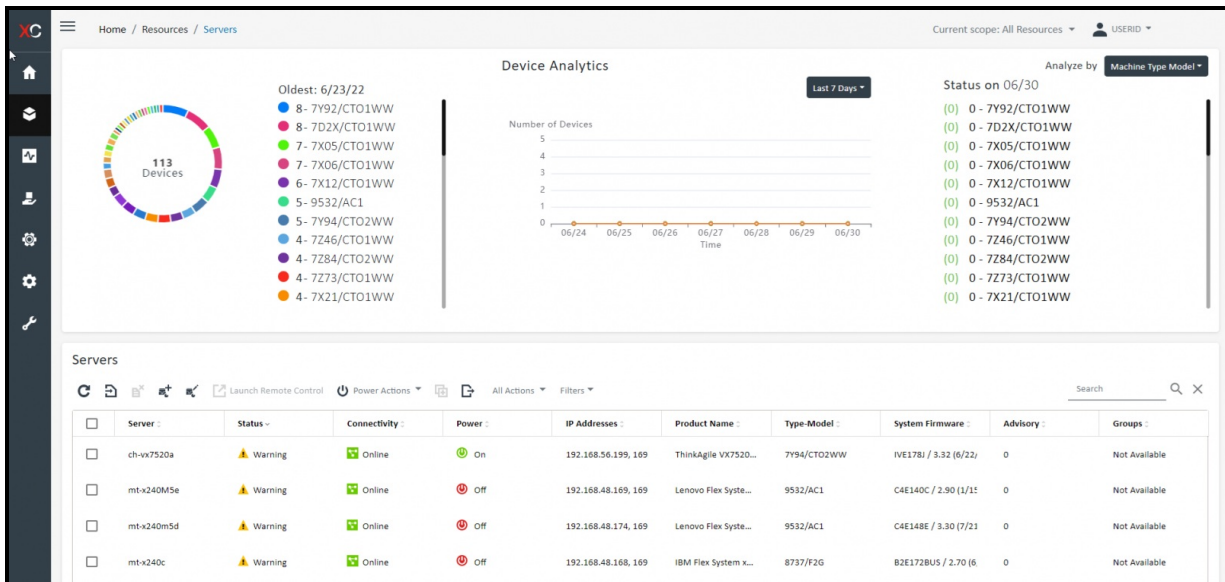


Figure 4. Servers view

From each of the views you can then select an individual device for specific information on that device as shown below:

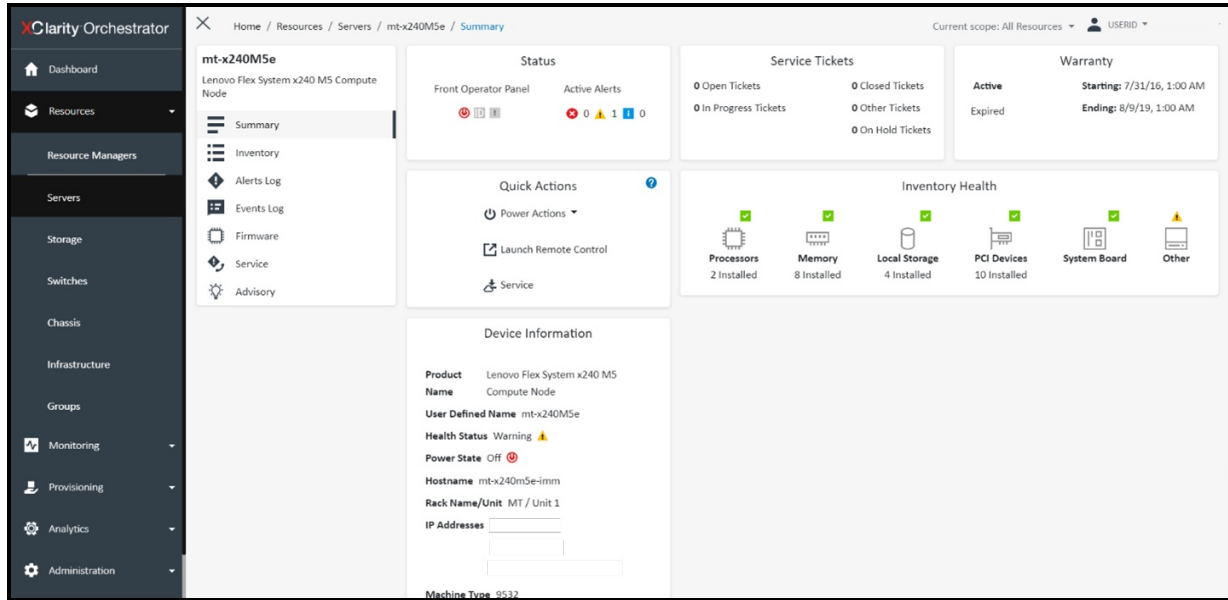


Figure 5. Device view

Monitoring

Alerts

From Monitoring you can navigate to Alerts

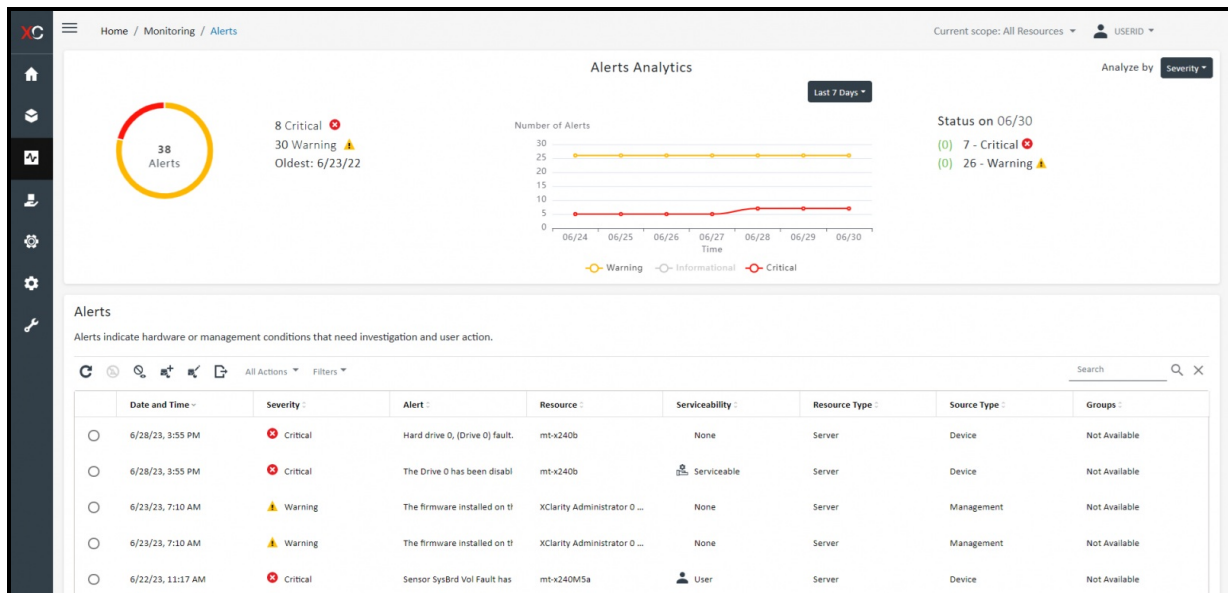


Figure 6. Alerts view

Events

From Lenovo XClarity Orchestrator, you have access to a historical list of all resource and audit events.

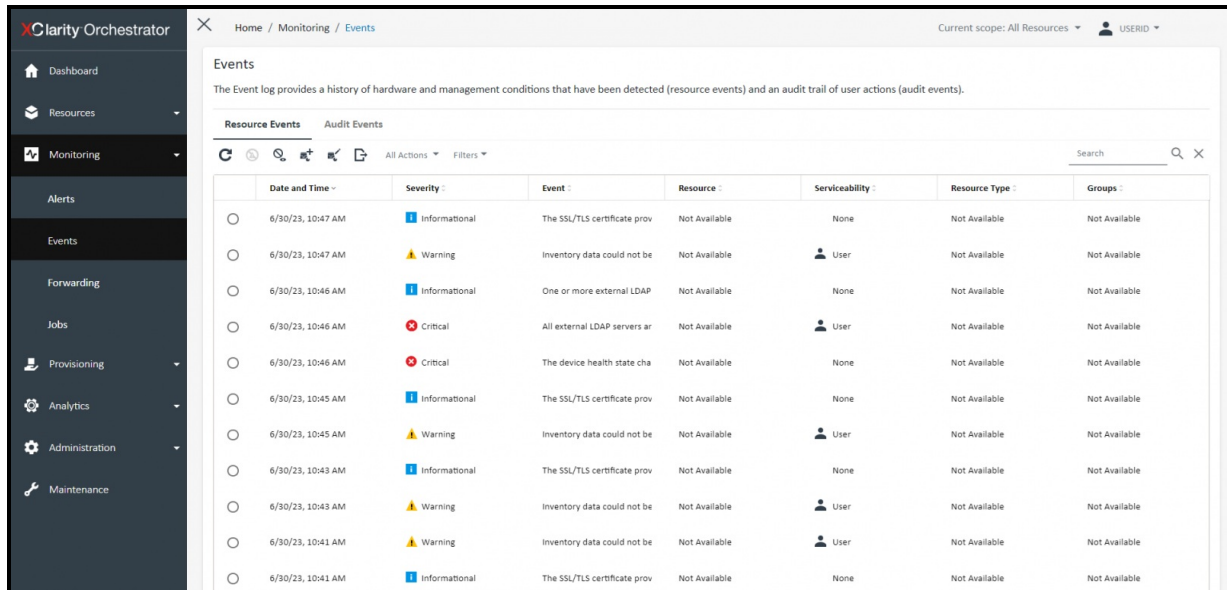


Figure 7. Events view

Event types explained:

- A resource event identifies a hardware or orchestrator condition that occurred on a managed device, resource manager, or XClarity Orchestrator. You can use these events to track and analyze hardware and orchestrator-server related issues.
- An audit event is a record of user activities that were performed from a resource manager or XClarity Orchestrator. You can use these audit events to track and analyze authentication-related issues.

Data Forwarders

Data Forwarders enable the ability to forward event, inventory, and metric data from Lenovo XClarity Orchestrator to external applications, which can then be used to monitor and analyze data.

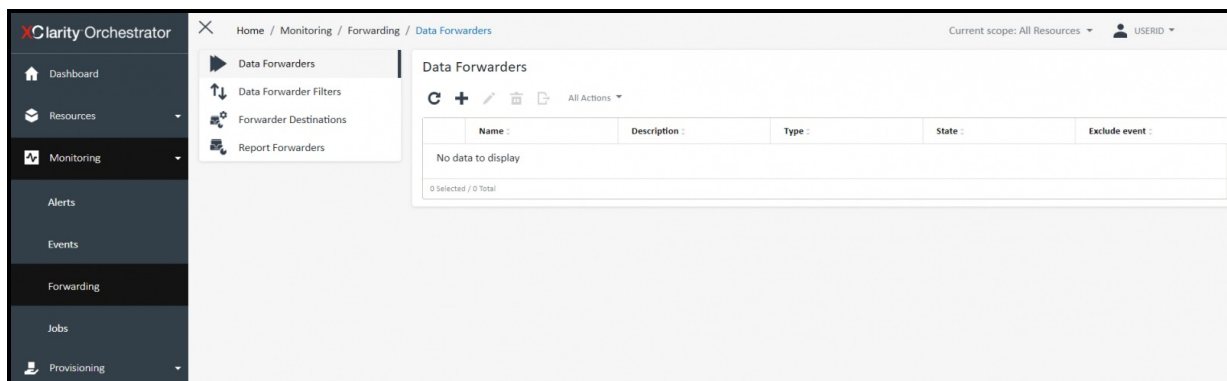


Figure 8. Data Forwarders

Job Status

Jobs are long-running tasks that run in the background. You can view a log of all jobs that are started by Lenovo XClarity Orchestrator.

Home / Monitoring / Jobs Current scope: All Resources

Jobs
Jobs are longer running tasks performed against one or more target systems. You can choose to delete a job or view its details.

All Actions Filters

	Job name	Status	Progress	Start time	Complete time	Target	Category
<input type="radio"/>	Updating connection deta...	Complete	100%	Dec 14, 2022, 8:13:36 AM	Dec 14, 2022, 8:13:36 AM	de-lxca.eu.lenovo.com	Management
<input type="radio"/>	Updating connection deta...	Complete	100%	Dec 14, 2022, 8:13:30 AM	Dec 14, 2022, 8:13:30 AM	de-lxca.eu.lenovo.com	Management
<input type="radio"/>	Connect manager de-lxca....	Complete	100%	Dec 13, 2022, 12:37:05 PM	Dec 13, 2022, 12:37:07 PM	Not Available	Management
<input type="radio"/>	Refresh multiple catalogs	Complete	100%	Nov 9, 2022, 4:56:09 PM	Nov 9, 2022, 4:58:29 PM	XClarity Orchestrator	Updates
<input type="radio"/>	Refresh multiple catalogs	Complete	100%	Aug 31, 2022, 9:59:50 AM	Aug 31, 2022, 10:03:54 AM	XClarity Orchestrator	Updates
<input type="radio"/>	Refresh multiple catalogs	Complete	100%	Jul 1, 2022, 12:43:15 PM	Jul 1, 2022, 12:53:40 PM	XClarity Orchestrator	Updates
<input type="radio"/>	Updating connection deta...	Complete	100%	Jun 27, 2022, 3:13:20 PM	Jun 27, 2022, 3:13:20 PM	ch-lxca.eu.lenovo.com	Management
<input type="radio"/>	Connect manager ch-lxca....	Complete	100%	Jun 25, 2022, 9:44:44 AM	Jun 25, 2022, 9:44:47 AM	Not Available	Management
<input type="radio"/>	Connect manager mt-lxca....	Complete	100%	Jun 23, 2022, 6:07:11 PM	Jun 23, 2022, 6:07:12 PM	Not Available	Management
<input type="radio"/>	Connect manager de-lxca....	Complete	100%	Jun 23, 2022, 5:55:49 PM	Jun 23, 2022, 5:55:51 PM	Not Available	Management

0 Selected / 24 Total Rows per page: 10

Figure 9. Job Status

Administration

From Administration you can navigate to:

Security

It is important that you [evaluate the security requirements](#) in your environment, understand all security risks, and minimize those risks. Lenovo XClarity Orchestrator includes several features that can help you secure your environment.

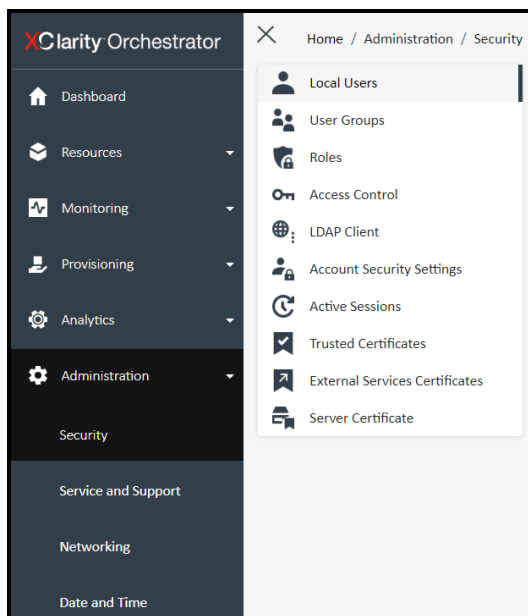


Figure 10. Security

See the following security considerations:

- **Cryptography considerations**

Lenovo XClarity Orchestrator supports TLS 1.2 and stronger cryptographic algorithms for secure network connections. For increased security, only [high-strength ciphers](#) are supported.

- **Security-certificate considerations**

Lenovo XClarity Orchestrator uses [SSL certificates](#) to establish secure, trusted communications between XClarity Orchestrator and its managed resource managers (such as Lenovo XClarity Administrator or Schneider Electric EcoStruxure IT Expert) as well as communications with XClarity Orchestrator by users or with different services. By default, XClarity Orchestrator and Lenovo XClarity Administrator use XClarity Orchestrator-generated certificates that are self-signed and issued by an internal certificate authority.

- **Authentication-server considerations**

You can choose to use the local Lightweight Directory Access Protocol (LDAP) server or another external LDAP server as the authentication server. The *authentication server* is a user registry that is used to authenticate user credentials. Lenovo XClarity Orchestrator supports two types of authentication servers:

- Local authentication server. By default, XClarity Orchestrator is configured to use the local (embedded) LDAP server that resides in the orchestrator server.
- External LDAP server. Microsoft Active Directory is supported as an external LDAP server. This server must reside on an outboard Microsoft Windows server that is connected to the management network.

For more information about setting up external LDAP servers, see [Setting up an external LDAP authentication server](#).

- **Access-control considerations**

Lenovo XClarity Orchestrator also [uses access-control lists \(ACLs\)](#) to determine which resources (devices, resource managers, and XClarity Orchestrator) users can access. When a user has access to a specific set of resources, that user can see data (such as inventory, events, alerts, and analytics) that is related to only those resources.

- **High availability**

For high availability for Lenovo XClarity Orchestrator, you should use the high availability features that are part of the host operating system or hypervisor.

Service and Support

Lenovo XClarity Orchestrator provides a set of tools that you can use to collect and send service files to Lenovo Support, set up automatic notification to service providers when certain serviceable events occur on specific devices, view service-ticket status, and warranty information. You can contact Lenovo Support to get help and technical assistance when you run into problems.

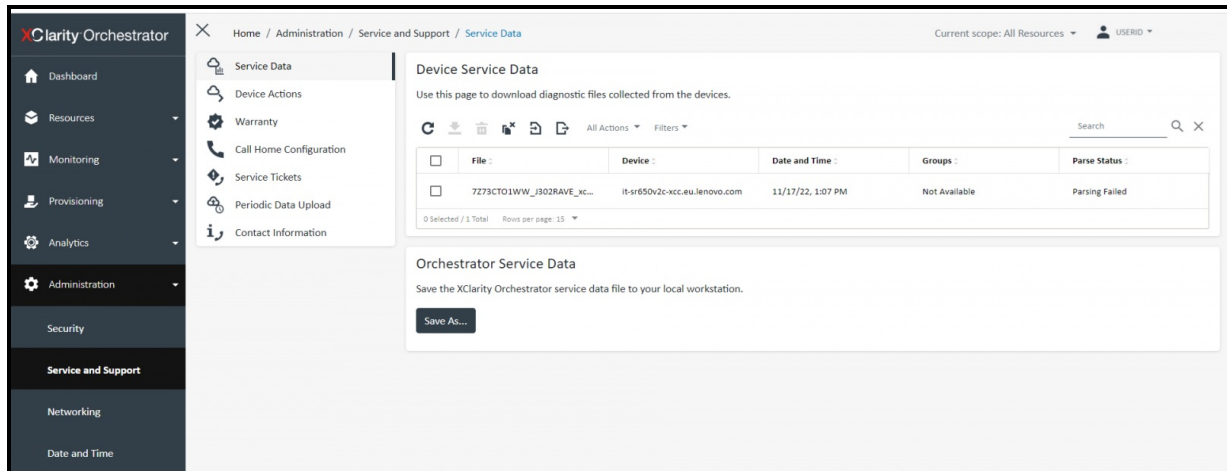


Figure 11. Service and Support

Networking

Within *Networking* you can configure a single network interface (using IPv4 and IPv6 settings), Internet routing settings, and proxy settings

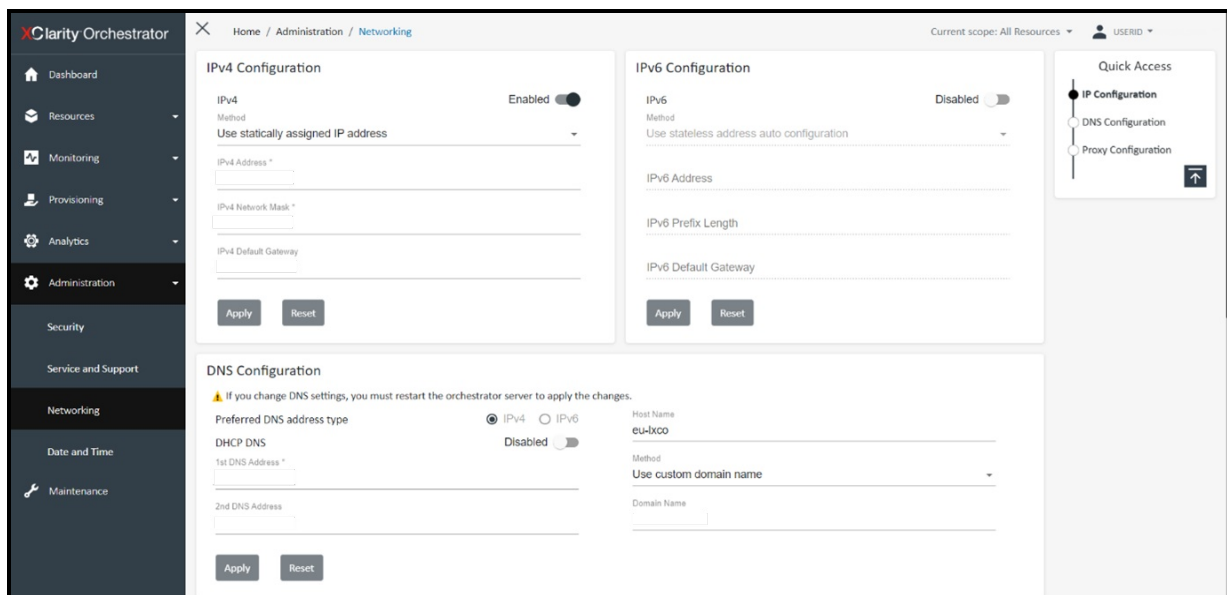


Figure 12. Networking

Date & Time

As a requirement you must set up at least one (and up to four) Network Time Protocol (NTP) server to synchronize the timestamps for Lenovo XClarity Orchestrator with events that are received from resource managers.

Note: The XClarity Orchestrator virtual appliance and its host must be set to synchronize to the same time source to prevent inadvertent time mis-synchronization between XClarity Orchestrator and its host.

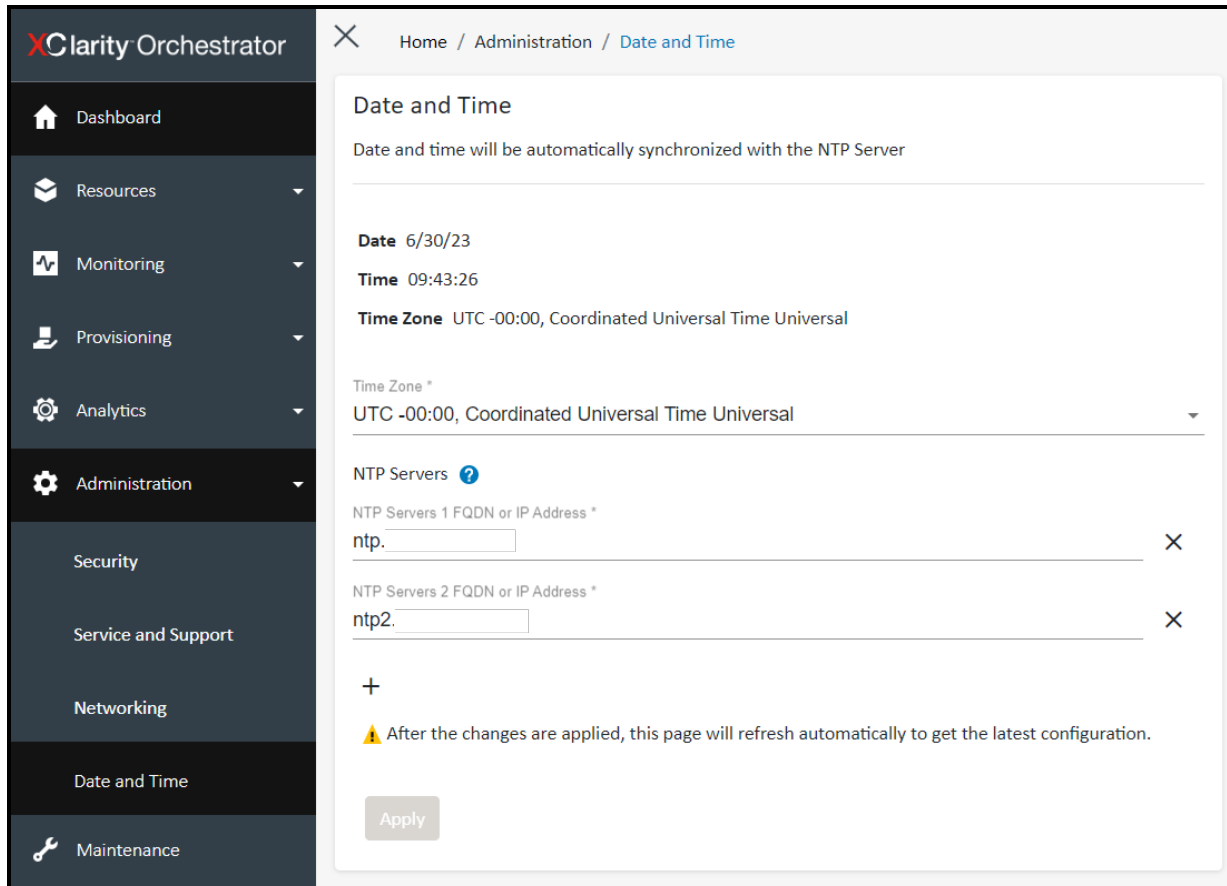


Figure 13. Date & Time

Maintenance

Maintenance provides information about License and Orchestrator Server updates.

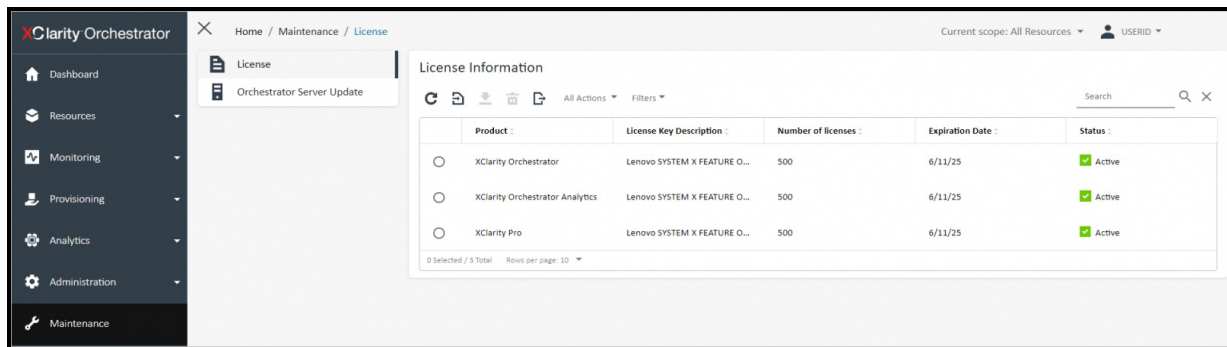


Figure 14. License

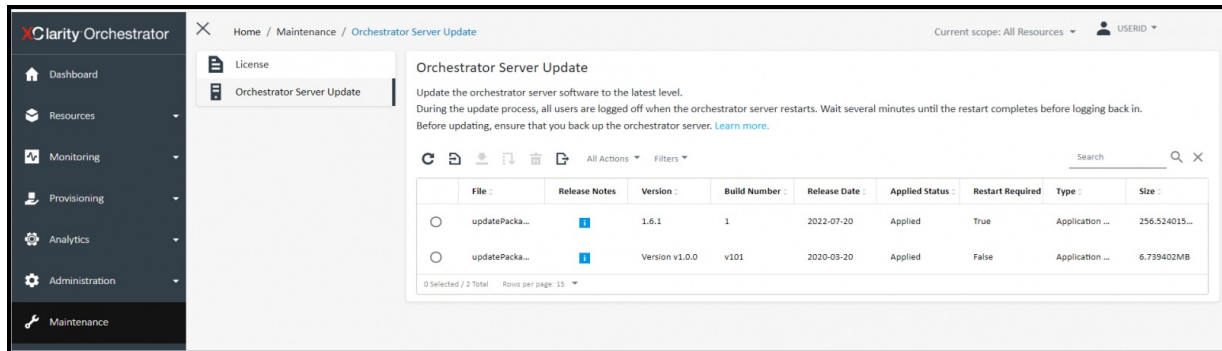


Figure 15. LXCO Server updates

Provisioning resources

You can use Lenovo XClarity Orchestrator for the following provisioning options for your managed resources, such as deploying updates to Lenovo XClarity Administrator resource managers and managed servers, configuring managed servers and deploying Operating Systems.

Provisioning updates to managed resources

You can use Lenovo XClarity Orchestrator to maintain current software levels on Lenovo XClarity Administrator resource managers and managed servers. You can use the updates catalog to know what software levels are available, use update-compliance policies to identify which resources need to be updated based on custom criteria, and then deploy the desired updates to those resources.



Figure 16. Provisioning updates to managed resources

For details, see <https://pubs.lenovo.com/lxco/provision-updates.html>

Provisioning server configurations

Server-configuration patterns are used to quickly configure multiple servers from a single set of defined configuration settings. Each pattern defines the configuration characteristics for a specific type of server. You can create a server pattern by learning the settings from an existing server.

For details, see <https://pubs.lenovo.com/lxco/provision-serverconfig.html>

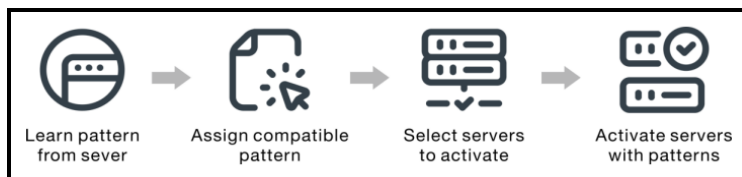


Figure 17. Provisioning server configurations

Provisioning operating systems

You can use Lenovo XClarity Orchestrator to manage the OS-images repository and deploy operating-system images.

For details, see <https://pubs.lenovo.com/lxco/provision-os.html>

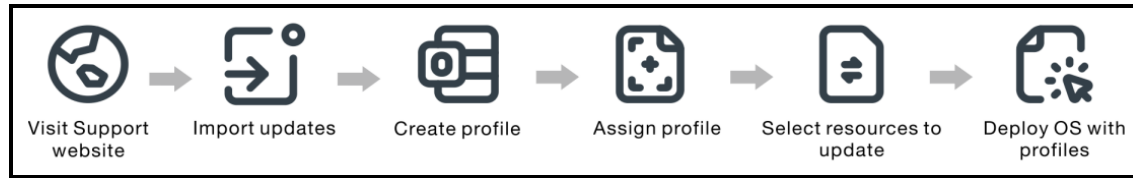


Figure 18. Provisioning operating systems

Analytics

Lenovo XClarity Orchestrator generates analytics alerts based on known hardware and firmware issues, monitors trends to detect anomalies that occur in your managed resources and builds heuristics that can calculate the likelihood of impending problems or failures. The trends are visualized as queries, graphs, and charts that show the compliance status, problem history, and breakdown of resources that have the most problems. You can then analyze these trends to get insights into the cause of problems and resolve them quickly.

Important: The analytics functions are supported for ThinkAgile, ThinkSystem, and ThinkEdge servers running XCC firmware v1.4 or later.

To use the analytics functions, a Lenovo XClarity Orchestrator Analytics license is needed for each device that supports the analytics functions. See the [Download and ordering information](#) section for ordering information.

For more information on the capabilities of XClarity Orchestrator Analytics see <https://pubs.lenovo.com/lxco/analyze.html>

Licensing

Lenovo XClarity Orchestrator is a for-fee application and thus requires a Software entitlement license to be purchased. When managing XClarity Administrator resource Managers this is additional to the XClarity Pro Licensing which is required for the resource managers (i.e. XClarity Administrator). You can use XClarity Orchestrator for free for up to 90 days using the free-trial license; however, after the free trial expires, you must purchase and install Lenovo XClarity Orchestrator Standard licenses for all managed devices to continue using XClarity Orchestrator.

License options for XClarity Orchestrator include:

- **Lenovo XClarity Orchestrator.** This license provides entitlement for service and support and enablement of all management functions for a single device.
- **Lenovo XClarity Orchestrator Edge Client Devices Licensing.** This license provides entitlement for service and support and enablement of all management functions for a single Edge Client device.
- **Lenovo XClarity Orchestrator Analytics.** This license provides entitlement to use the analytics functions within XClarity Orchestrator for each managed device supporting this capability.

You must purchase a license for each managed device. A license *is not* tied to specific devices.

License compliance is determined based on the number of devices that are managed by XClarity Orchestrator. The number of managed devices must not exceed the total number of licenses in all active license keys. If XClarity Orchestrator is not in compliance with the installed licenses (for example, if licenses expire or if managing additional devices exceeds the total number of active licenses), you have a grace period of 90 days to install appropriate licenses.

If licenses are already installed, new licenses are *not* required when upgrading to a new release of XClarity Orchestrator.

For information about purchasing XClarity Orchestrator licenses, contact your Lenovo representative or authorized business partner.

Download and ordering information

Lenovo XClarity Orchestrator is available to download from Lenovo at the following link:

<https://datacentersupport.lenovo.com/solutions/ht509976-lenovo-xclarity-orchestrator>

The download includes a 90-day evaluation license.

Lenovo XClarity Orchestrator, Lenovo XClarity Orchestrator Edge Client Devices and Lenovo XClarity Orchestrator Analytics software entitlements licenses are available as 1-year, 3-year, or 5-year software subscription and support.

Lenovo XClarity Orchestrator and Lenovo XClarity Orchestrator Analytics licenses are available on a per-managed-endpoint basis or per-managed-chassis basis. The per chassis licenses offer a more cost-effective way of purchasing licenses for the Flex System environment. Lenovo XClarity Orchestrator Edge Client Devices Licenses are available on a per-managed-client basis.

When you purchase XClarity Orchestrator, the order is fulfilled via electronic software delivery (ESD) using the [Lenovo Key Management System \(LKMS\)](#). The order is placed onto LKMS using an email address for the end user who has ordered the code. This email address is where the Activation Code is sent in PDF format (the email will come from lkmsdev@lenovo.com). The recipient email address is the login to the LKMS system for administration and to manage the LKMS inventory.

The Activation code is redeemed via LKMS and the information about the *end customer* should be entered during the redemption process. The customer information is then used to send the electronic proof of entitlement (will come from sw_override@lenovo.com) and a welcome letter along with an explanation of how to obtain the code from the LKMS Site: <https://fod.lenovo.com/lkms>.

Although a full description of how to apply the XClarity Orchestrator licenses is available at the following link: <https://pubs.lenovo.com/lxco/install-lxco-license.html>

The part numbers for the different LXCO offerings are listed in the following tables.

Table 1. Ordering information - Lenovo XClarity Orchestrator

Part number	Feature code	Description
Per managed endpoint		
7S0X0001WW	S2JR	Lenovo XClarity Orchestrator, per Managed Endpoint w/1 Yr SW S&S
7S0X0002WW	S2JS	Lenovo XClarity Orchestrator, per Managed Endpoint w/3 Yr SW S&S
7S0X0003WW	S2JT	Lenovo XClarity Orchestrator, per Managed Endpoint w/5 Yr SW S&S
Per managed Flex System Chassis		
7S0X0004WW	S2JU	Lenovo XClarity Orchestrator, per Managed Chassis w/1 Yr SW S&S
7S0X0005WW	S2JV	Lenovo XClarity Orchestrator, per Managed Chassis w/3 Yr SW S&S
7S0X0006WW	S2JW	Lenovo XClarity Orchestrator, per Managed Chassis w/5 Yr SW S&S

Table 2. Ordering information - Lenovo XClarity Orchestrator Edge Client

Part number	Feature code	Description
Per managed client		
7S0X000EWW	SAYR	Lenovo XClarity Orchestrator Edge Client– Per Managed Client with 1Year SW S&S
7S0X000FWW	SAYS	Lenovo XClarity Orchestrator Edge Client – Per Managed Client with 3 Years SW S&S
7S0X000GWW	SAYT	Lenovo XClarity Orchestrator Edge Client – Per Managed Client with 5 Years SW S&S

Table 3. Ordering information - Lenovo XClarity Orchestrator Analytics

Part number	Feature code	Description
Per managed endpoint		
7S0X0007WW	S2JX	Lenovo XClarity Orchestrator Analytics, per Managed Endpoint w/1 Yr SW S&S
7S0X0008WW	S2JY	Lenovo XClarity Orchestrator Analytics, per Managed Endpoint w/3 Yr SW S&S
7S0X0009WW	S2JZ	Lenovo XClarity Orchestrator Analytics, per Managed Endpoint w/5 Yr SW S&S
Per managed Flex System chassis		
7S0X000AWW	S2K0	Lenovo XClarity Orchestrator Analytics, per Managed Chassis w/1 Yr SW S&S
7S0X000BWW	S2K1	Lenovo XClarity Orchestrator Analytics, per Managed Chassis w/3 Yr SW S&S
7S0X000CWW	S2K2	Lenovo XClarity Orchestrator Analytics, per Managed Chassis w/5 Yr SW S&S

Supported host systems

XClarity Orchestrator runs in a virtual appliance on a host system. The following hypervisors are supported for installing XClarity Orchestrator:

- Microsoft Windows Server 2022 with Hyper-V installed (LXCO v2.0.0)
- Microsoft Windows Server 2019 with Hyper-V installed
- VMware ESXi 7.0
- VMware ESXi 6.7, U1, U2, and U3
- VMware ESXi 6.5, U1 and U2

However to view the latest Host software supported, as new versions are released please refer to the following link for the latest information:

https://pubs.lenovo.com/lxca/lxca_whatsnew

For Hyper-V, the virtual appliance is a virtual-disk image (VHD). For VMware ESXi, the virtual appliance is an OVF template.

The host system that is running the Lenovo XClarity Orchestrator virtual machine has the following *minimum* requirements:

- 4 virtual processor cores
- 16 GB memory
- 551 GB storage, across two attached disks.
 - 251 GB minimum for the virtual appliance (disk 0)
 - 100 GB for the updates repository (disk 1)
 - 200 GB for the OS-images repository (disk 2)

Note: You cannot increase or decrease the size of the disk that is used for the updates repository and OS-images repository.

Software prerequisites

XClarity Orchestrator requires the following software.

- **Authentication server.** XClarity Orchestrator uses an internal Lightweight Directory Access Protocol (LDAP) server, by default, for authentication.
If you choose to use an external authentication server, the following LDAP servers are supported:
 - Microsoft Active Directory running on Windows Server 2008 or later
- **NTP server.** A Network Time Protocol (NTP) server is required to ensure that timestamps for all events and alerts that are received from the resource managers and managed devices are synchronized with XClarity Orchestrator. Ensure that the NTP server is accessible over the management network (typically the Eth0 interface).
Consider using the local system on which XClarity Orchestrator is installed as the NTP server. If you do, ensure that the local system is accessible over the management network.

Supported managed endpoints

XClarity Orchestrator can support an unlimited number of resource managers that collectively manage a maximum of 10,000 devices.

XClarity Orchestrator supports the following resource managers.

- **Lenovo XClarity Management Hub**

XClarity Orchestrator manages, monitors, and provisions ThinkEdge Client devices that are under management by a Management Hub instance.

You can find a complete list of supported ThinkEdge Client devices and options (such as I/O, DIMMs, and storage adapters), minimum required firmware levels, and limitations considerations from the following page:

<https://datacentersupport.lenovo.com/us/en/solutions/ht503455>

For general information about hardware configurations and options for a specific device, see the Lenovo ServerProven web site, <https://serverproven.lenovo.com/>.

The XClarity Management Hub runs in a virtual appliance on a host system. The following hypervisors are currently supported for installing Lenovo XClarity Management Hub.

- VMware ESXi 7.0, U1, U2, and U3
- VMware ESXi 6.7, U1, U2, and U3

For VMware ESXi, the virtual appliance is an OVF template.

Note: For VMware ESXi 6.7 U2, you must use the ISO image VMware-ESXi-6.7.0.update02-13981272-LNV-20190630.iso or later.

Further Hardware and Software requirements for the XClarity Management hub can be found at the following link: <https://pubs.lenovo.com/lxco/plan-prereqs-hub.html>

- **Lenovo XClarity Administrator v2.6 or later**

XClarity Orchestrator manages, monitors, and provisions physical devices with management controllers that are under management by an XClarity Administrator instance.

XClarity Orchestrator supports all devices that are supported by XClarity Administrator and Lenovo XClarity Management Hub except where noted. You can find a complete list of supported devices and options (such as I/O, DIMM, and storage adapters), minimum required firmware levels, and limitations considerations from the following Lenovo XClarity Support webpages:

- [ThinkSystem, ThinkAgile, ThinkEdge, System x, Converged HX, and NeXtScale rack and tower servers](#)
- [Flex System devices and ThinkSystem compute nodes](#)
- [ThinkServer rack and tower servers](#)
- [RackSwitch devices](#)
- [Storage devices](#)

For general information about hardware configurations and options for a specific device, see the Lenovo ServerProven web site, <https://serverproven.lenovo.com/>.

Note: The OS deployment feature requires XClarity Administrator v4.0 or later.

- **Schneider Electric EcoStruxure IT Expert**

XClarity Orchestrator manages and monitors infrastructure resources, such as PDUs and UPSs, that are managed by EcoStruxure IT Expert

- **VMware vRealize Operations Manager**

XClarity Orchestrator monitors virtual workload metrics from vRealize Operations Manager.

Note: vRealize Operations Manager is not included in the list of resource managers, as it does not manage devices in XClarity Orchestrator.

Supported web browsers

The XClarity Orchestrator web interface works with the following web browsers.

- Chrome 80.0 or later
- Firefox ESR 68.6.0 or later
- Microsoft Edge 40.0 or later
- Safari 13.0.4 or later (running on macOS 10.13 or later)

Integration

XClarity Orchestrator supports the following integration applications:

- [XClarity Orchestrator app for Splunk](#)
- [ServiceNow for XClarity Orchestrator](#)
- [XClarity Orchestrator Integration with Terraform](#)

XClarity Orchestrator app for Splunk

Splunk is a tool for data-center operators to track and analyze event logs and other data. In due course Lenovo provides a Lenovo XClarity Orchestrator app for Splunk that analyzes events that are surfaced by XClarity Orchestrator and presents the analysis in a set of dashboards. You will be able monitor the dashboards in this app as an aid to find potential problems in your environment so that you can react before serious issues occur.

The XClarity Orchestrator app will provide the following functions:

- **Monitoring of hardware events in an XClarity Orchestrator managed environment.**
Quickly identify trends based on hardware events, including hardware failures, power/thermal thresholds that were exceeded, and predictive failure alerts (PFAs). Events are categorized by source, type of device that generated the events, and whether service is required
- **Auditing for security changes that occur in the resource managers (such as XClarity Administrator).**
Security events can help identify whether unauthorized personnel are attempting to access your computing resources. This might include events showing that new users have been added/deleted, what IP addresses users are using to access the XClarity Orchestrator, the time and dates when they are accessing resources, and any changes to the security settings of the XClarity Orchestrator (including user IDs on the XClarity Orchestrator). Visual representations show changes in these activities, which could identify if an attack is occurring.
- **Auditing for the provisioning of resources that are managed by XClarity Orchestrator**
This includes:
 - Configuration pattern deployment
 - Bare-metal OS deployments -This can help identify how much change is occurring to the configuration of servers and if the changes were authorized.Auditing can help identify how much change is occurring to the configuration of servers and if the changes were authorized.

You can download the XClarity Orchestrator app for Splunk from [Splunkbase](#).

ServiceNow for XClarity Orchestrator

ServiceNow for Lenovo XClarity Orchestrator is a plug-in for ServiceNow that integrates with XClarity Orchestrator. It retrieves inventory data from XClarity Orchestrator into the ServiceNow configuration management database (CMDB), and enables event management, including viewing the information of fans, power supplies, and switches, and monitoring events of the Lenovo servers.

ServiceNow for XClarity Orchestrator connects to XClarity Orchestrator to synchronize inventory data between ServiceNow and XClarity Orchestrator using an HTTPS connection.

The primary feature of ServiceNow for XClarity Orchestrator is to retrieve inventory data from registered XClarity Orchestrator instances import the data into the ServiceNow CMDB and enable event management. The incidents updated in the ServiceNow Incident table are reflected back to the XClarity Orchestrator instances.

ServiceNow for XClarity Orchestrator supports the following features:

- Register XClarity Orchestrator with ServiceNow
- Import inventories and map them into the ServiceNow CMDB
- Set up ServiceNow for XClarity Orchestrator as an event monitor in XClarity Orchestrator
- Raise incidents for serviceability events
- Send incident details to the XClarity Orchestrator instance that passed the generated event
- Send incident updates from ServiceNow to XClarity Orchestrator
- Provide email notification for any changes/updates in the Incident Table

For more information on the XClarity Orchestrator plug-in for ServiceNow, see:

https://pubs.lenovo.com/lxco/lxco_servicenow_iug.pdf

XClarity Orchestrator Integration with Terraform

Terraform is an open-source *infrastructure as code* software tool for changing, configuring, and automating infrastructure (resources) using a set of predefined declarative definitions. The Lenovo XClarity Orchestrator provider is a plugin for Terraform that you can use to automatically monitor, manage, and provision resources that are managed by XClarity Orchestrator.

You can use Terraform configurations to perform the following functions.

- **Managing resource managers.** Retrieve information about, connect, and disconnect resource managers.
- **Managing servers.** Retrieve information about and modify the power state of servers.
- **Provisioning updates.** Create, modify, and, assign update-compliance policies, and apply updates to one or more resources.
- **Provision server configuration.** Create, assign and deploy configuration settings on managed servers to comply with a defined server-configuration pattern.

For more information on the XClarity Orchestrator Integration for Terraform see:

<https://pubs.lenovo.com/lxco/lxco-pdf-terraform.pdf>

Getting Support for XClarity Orchestrator

For details on support for XClarity solutions see:

<https://datacentersupport.lenovo.com/us/en/solutions/ht507079#2>

Related links

For more information, see the following resources:

- XClarity Orchestrator download (includes 90-day trial license)
<https://datacentersupport.lenovo.com/solutions/ht509976-lenovo-xclarity-orchestrator>
- Lenovo XClarity Orchestrator Online Product Information Center
<https://pubs.lenovo.com/lxco/>
- Lenovo XClarity Orchestrator product publications in PDF format:
<https://pubs.lenovo.com/lxco/lxco-pdfs.html>
- XClarity Orchestrator app for Splunk User's Guide
https://pubs.lenovo.com/lxco/lxco-pdf-splunk_v1.0.0.pdf
- Lenovo XClarity discussion forum
https://forums.lenovo.com/t5/Lenovo-XClarity/bd-p/xco1_eg
- Lenovo XClarity support page
<https://datacentersupport.lenovo.com/documents/LNVO-XCLARIT>
- Lenovo XClarity Administrator product guide:
<https://lenovopress.lenovo.com/tips1200-lenovo-xclarity-administrator>
- Lenovo XClarity Administrator Download, Updates and Repository Pack page
<https://datacentersupport.lenovo.com/documents/LNVO-LXCAUPD>
- Lenovo Key Management System
<https://fod.lenovo.com/lkms>
- Lenovo Key Management System user guide, *Using Lenovo Features on Demand*
<https://lenovopress.com/redp4895>
- Lenovo XClarity Controller Online Documentation Portal
<https://pubs.lenovo.com/lxcc-overview/>
 - Lenovo XClarity Controller2 Online Documentation - Servers with 4th Gen Intel Xeon and AMD EPYC processors
<https://pubs.lenovo.com/xcc2/>
 - Lenovo XClarity Controller Online Documentation - Servers with 3rd Gen Intel Xeon processors and 2nd/3rd Gen AMD EPYC processors
<https://pubs.lenovo.com/xcc-amd/>
 - Lenovo XClarity Controller Online Documentation - Servers with 1st/2nd Gen Intel Xeon processors
<https://pubs.lenovo.com/xcc/>
- Integrated Management Module 2 Online Documentation
http://systemx.lenovofiles.com/help/topic/com.lenovo.sysx.imm2.doc/product_page.html
- Chassis Management Module 2 Online Documentation
http://flexsystem.lenovofiles.com/help/topic/com.lenovo.acc.cmm.doc/cmm_product_page.html

About the author

Lesley Bain is an IT consultant with Lenovo in Scotland, UK. She has been with IBM/Lenovo combined for 20 years working with x86 Server Hardware and related solutions. Her areas of expertise include x86 Integrated Platform Management, Centralized Management Solutions from IBM and Lenovo, and Integration with Enterprise Management and Virtualization Solutions. Lesley is involved in all aspects to do with pre-sales engagement activities, including Lenovo technical field team enablement, Lenovo Business Partner and customer presentations, demonstrations, proofs of concept, and solution design. She has co-authored three IBM Redbooks publications on systems management solutions and four Lenovo Press publications on Systems Management Solutions, she has also presented at various technical conferences over the years. Lesley holds a Bachelor of Science degree in Computing Information Systems from Glasgow Caledonian University, Scotland, UK

Related product families

Product families related to this document are the following:

- [Lenovo XClarity](#)

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2024. All rights reserved.

This document, LP1337, was created or updated on April 11, 2024.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at:
<https://lenovopress.lenovo.com/LP1337>
- Send your comments in an e-mail to:
comments@lenovopress.com

This document is available online at <https://lenovopress.lenovo.com/LP1337>.

Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at <https://www.lenovo.com/us/en/legal/copytrade/>.

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo®
Flex System
NeXtScale
RackSwitch
ServerProven®
System x®
ThinkAgile®
ThinkEdge®
ThinkServer®
ThinkSystem®
XClarity®

The following terms are trademarks of other companies:

Intel® and Xeon® are trademarks of Intel Corporation or its subsidiaries.

Microsoft®, Active Directory®, Hyper-V®, Microsoft Edge, Windows Server®, and Windows® are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.